


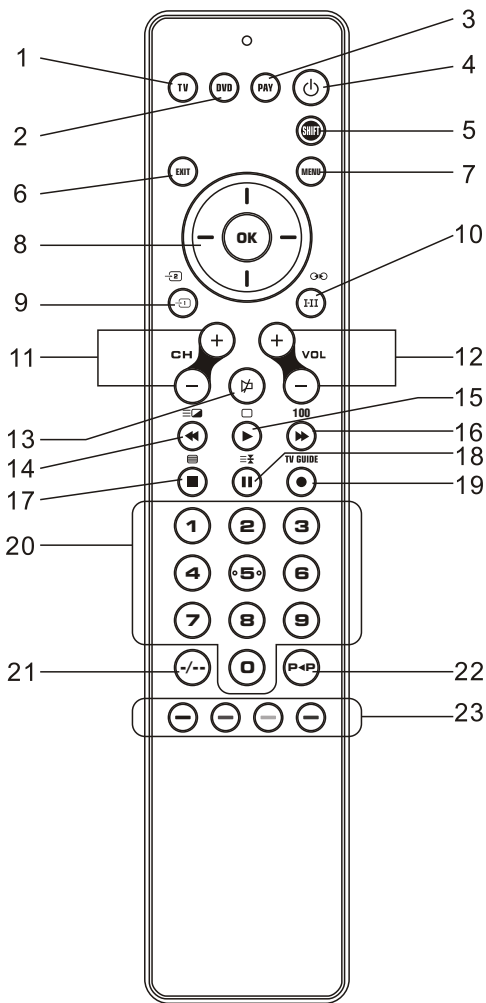







 
 







 





PRODUCT DIAGRAM



KEY FUNCTION DESCRIPTIONS

1.  Turns the remote to TV mode.
2.  Turns the remote to DVD mode.
3.  Turns the remote to pay TV mode.
4.  Turns the power on or off for selected device.
5.  Pressing the shift key will allow the next button pressed to use its secondary function.
6.  Exit from the current menu option.
7.  Access selected devices menu screen.
8.  Directional buttons and ok button to select an option.
9.  AV also AV/2 when in shift mode.
10.  Switch between different languages also Stereo When in shift mode.
11.  Change the selected devices channels up and down.
12.  Increase or decrease the selected devices volume level.
13.  Mute button to turn selected devices volume on or off.
14.  Rewind or Teletext Mix When in shift mode.
15.  Play or Teletext TV when in shift mode.
16.  Fast forward or Teletext 100 when in shift mode.
17.  Stop or Teletext when in shift mode.
18.  Pause or Teletext Reduce when in shift mode.
19.  Record or TV guide for SAT when in shift mode.
20.  Numeric keys 0 to 9.
21.  Single or double digit selection.
22.  Return to previous channel viewed.
23.  Color buttons for accessing menu options.

Congratulations! Your Universal Remote Control (URC) is a state-of-the-art device which integrates many different infra-red remote controls to deliver instant A/V action to your fingertips.

Before operating the remote, please read thoroughly (1) the inside of the coversheet and (2) this manual. Then reserve them for future reference.

1 HOW TO INSTALL THE BATTERIES

Alkaline batteries are recommended. The number of batteries required is stated on the back of the coversheet.

1. Remove the battery cover on the back of your URC.
2. Check the polarity of the batteries and the “+/-” marks inside the battery compartment.
3. Insert the batteries.
4. Push the battery cover back in place.

Battery Low

If the indicator flashes twice slowly after using the URC, it shows that the battery level is low. You must replace them with new batteries to ensure proper functioning.

2 HOW TO SET UP THE URC

By entering Device Code

You may setup the URC by following the code entering instructions.

1. Referring to the DEVICE CODE LIST, look up the 4-digit Device Code which corresponds to the brand of your A/V equipment. If there is more than one Device Code listed under your brand, start from the first code.
2. Press the desired Device Mode Key (e.g. **TV**).
3. Hold down “**CH+**” and “**VOL-**” on the URC simultaneously for 2 seconds until the indicator lights up.
4. Use the number keys **0-9** to enter your 4-digit Device Code. The indicator should go out immediately.

Turn on your device (e.g. TV), then try the function keys on the URC. If your device (e.g. TV) responds to your activated function correctly, you have entered the right Device Code. Otherwise, repeat the above steps with the next available Device Codes until your device (e.g. TV) responds to your activated function, and most keys work correctly.

- * Simply repeat the above procedures to enter the Device Codes for your VCR, DVD or PAY TV. (Remember to press the correct Device Mode Key in step 2 above)

Note :

- DVD, PAY TV and other Device Codes can be entered into any device modes except “TV” mode. Simply press the device mode key and enter your 4-digit device code for DVD, PAY TV and other devices. If the indicator flashes twice in step 4, a wrong Device Code has been entered. You are required to repeat step 2 to 4 again.

Suggestion :

- If you cannot find a correct Device Code for your equipment, see **2 HOW TO SET UP THE URC- By Searching Through the Library.**
- For future reference you are recommended to take a note of your Device Codes in the space provided on the product’s back label after setting up the URC correctly.

By Searching Through the Library

If you cannot identify a correct Device Code for your equipment from the Device Code list, you may search for the code in the library:-

1. Turn on your device manually (e.g. TV).
2. Press a desired Device Mode Key (e.g. **TV**).
3. Hold down "**CH+**" and "**VOL-**" on the URC simultaneously for 2 seconds until the indicator lights up.
4. Enter a corresponding Magic Search Code from the following table. The indicator should go out immediately.

DEVICE TYPE:	TV	VCR	PAY TV Satellite	PAY TV Cable	DVD
MAGIC SEARCH CODE:	0001	0002	0003	0004	0005

(e.g. press **TV** device mode key, then press "**CH+**" and "**VOL-**", and enter TV Magic Search Code 0001.)

5. Press the same desired device mode key again as in step 2 above. (e.g. **TV**)
6. Hold down "**CH+**" & "**VOL-**" simultaneously for 2 seconds until the indicator lights up, and your URC is ready to start searching.
7. Aim the URC at your device (e.g. TV), press the "**⏻**" key slowly and repeatedly until the device has been turned off.

Once your device has been turned off, immediately press Device Mode Key (e.g. **TV**) to lock in code and the indicator should go out.

- * Simply repeat the above setup procedures to search for the Device Code for your VCR, SAT, DVD or PAY TV. (Remember to press the correct Device Mode Key and correct Magic Search Code in step 2-5 above)

IMPORTANT:

- If the power on/off function of your device is not infra-red controlled, you need to follow steps 2 to 6 above and start searching :-
- Press "**⏻**" and another function key alternately until your device responds to the expected function, then press the same Device Mode Key (e.g. **TV**) to lock in the code.
e.g. Press "**⏻**" & "**1**" alternately, or ;
Press "**⏻**" & "**▶**" alternately.

Note:

- DVD, PAY TV and other device codes can be searched for and locked into any device modes except "TV" mode. Simply press the corresponding device mode key in step 2 & 5 and enter an appropriate Magic Search Code for your DVD, PAY TV and other devices.
- Each time you press the "**⏻**", the URC will skip to the next code and send out a POWER signal trying to turn off your device.
If you fail to stop pressing "**⏻**" in time when your device has been turned off, turn your device on again immediately. Before the indicator goes out, press "**⏪**" on the URC to skip backward. Repeat step 7 above and lock in the code.
- If the indicator flashes twice after your pressing of "**⏻**" key, you are already at the last code of the library. Press "**CH+**" and "**VOL-**" to resume the URC and repeat the above procedures carefully to search again.

3 OPERATING THE URC

Normal Operation

Once you have set up the URC for your A/V equipment, it works like your original remote control. To operate, just aim it at your equipment, press an appropriate device mode key and invoke the desired function by pressing a corresponding key on the URC. The indicator flashes during signal transmission and as confirmation of key touch.

Punch Through

Punch Through Channel

Punch through channel allows you to operate channel up and down without having to switch the device modes repeatedly even when your URC is in other operating modes.

To activate the punch through channel setting:

1. Press desired Device Mode Key (e.g. **TV**).
2. Press and Hold “ **CH+** ” key.
3. Press desired Device Mode Key (e.g. **PAY**).
4. Release “ **CH+** ” (the indicator flashes once if the setting is activated).

To deactivate the punch through channel setting:

1. Press desired Device Mode Key (e.g. **TV**).
2. Press and Hold “ **CH-** ” key.
3. Press desired device Mode Key (e.g. **PAY**).
4. Release “ **CH-** ” (the indicator flashes twice if the setting is deactivated).

Punch Through Volume

Punch through volume allows you to operate volume up and down without having to switch the device modes repeatedly even when your URC is in other operating modes.

To activate the punch through volume setting:

1. Press desired Device Mode Key (e.g. **TV**).
2. Press and Hold “ **VOL+** ” key.
3. Press desired Device Mode Key (e.g. **PAY**).
4. Release “ **VOL+** ” (the indicator flashes once if the setting is activated).

To deactivate the punch through volume setting:

1. Press desired Device Mode Key (e.g. **TV**).
2. Press and Hold “ **VOL-** ” key.
3. Press desired Device Mode Key (e.g. **PAY**).
4. Release “ **VOL-** ” (the indicator flashes twice if the setting is deactivated).

Macro Power

Macro Power allows you to turn two of your A/V equipment on/off simultaneously.

To activate the macro power setting:


1. Press desired Device Mode Key (e.g. **TV**).
2. Press and Hold “ **⏻** ” key.
3. Press desired Device Mode Key (e.g. **PAY**).
4. Release “ **⏻** ” (the indicator flashes once if the setting is activated).

To deactivate the macro power setting:

1. Press desired Device Mode Key (e.g. **TV**).
2. Press and Hold “ **⏻** ” key.
3. Press desired Device Mode Key (e.g. **PAY**).
4. Release “ **⏻** ” (the indicator flashes twice if the setting is deactivated).


4 ADVANCED OPERATION


Secondary Function

Symbols of the secondary functions are printed in different colours on the panel, and a SECONDARY FUNCTION TABLE is included on the inside page of the coversheet. To invoke a secondary function, press  followed by a corresponding function key.

Secondary Device Mode

1. If you intend to operate more than 3 (or 4) equipment with your URC, you may search/enter the additional device codes.

Following all standard procedures in setting up the URC (See **2** HOW TO SET UP THE URC), press  followed by a desired device mode key to enter a secondary device mode. All settings will be stored in the shift bank of such device mode.

2. To invoke functions stored inside the shift bank of a device mode, press  followed by the device mode key, your URC will stay on that particular operating mode.

5 MAINTENANCE

1. Do not expose your URC to dust, strong sunlight, humidity, high temperatures or mechanical shocks.
2. Do not use old and new batteries together as old batteries tend to leak.
3. Do not use corrosive or abrasive cleansers on your URC.
4. Keep the unit dust free by wiping it with a soft, dry cloth.
5. Do not disassemble your URC, it contains no user-serviceable parts.

6 TROUBLESHOOTING

Q. My URC does not work at all!

- A. Check your A/V device, if the device's main switch is turned off, your URC cannot operate your device.
- A. Check whether your batteries are inserted properly and are in the correct +/- position.
- A. Check whether you have pressed the corresponding device mode key for your device.
- A. If the batteries are low, replace the batteries.

Q. If several Device Codes are listed under the brand of my A/V device, how can I select the correct Device Code?

- A. To seek the correct Device Code for your A/V device, test the codes one by one until most keys work properly.

Q. My A/V equipment responds only to some of the commands.

- A. You have set a code for which only some commands work properly but some do not. Try other codes until most keys work properly.