

 


skandia







 
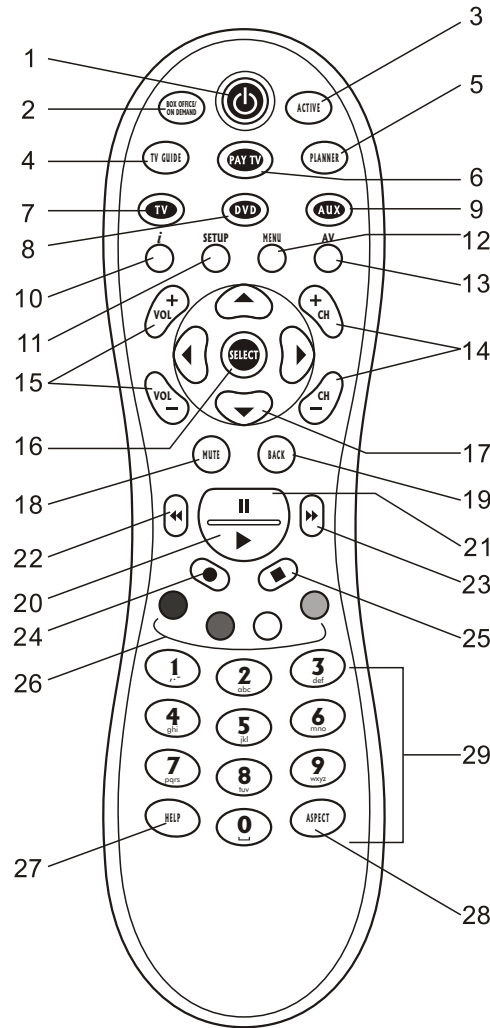 










PAY TV REMOTE

EW-8360

PRODUCT DIAGRAM



KEY FUNCTION DESCRIPTIONS

1.  Turns the power on or off for the selected device.
2.  Order movies from Foxtel Box Office.
3. **ACTIVE** Displays Foxtels interactive services.
4. **TV GUIDE** Displays Foxtels program listings screen.
5. **PLANNER** Display your personal planner to view program reminders.
6.  Turn the remote to Foxtel mode.
7.  Turn the remote to TV mode.
8.  Turn the TV to DVD mode.
9.  Turn the TV to AUX mode.
10.  Display more information about the program.
11. **SETUP** Display the setup screen to change the Foxtel settings.
12. **MENU** Enter the Menu for the selected AV device.
13. **AV** Scroll through different AV modes.
14.  Change channels up and down and pages up and down when in TV guide.
15.  Change volume up and down.
16.  Confirms choices in menus and displays the i-search banner.
17.  Navigate through menus.
18. **MUTE** Turns the sound on or off.
19. **BACK** Jumps back to the previous screen or channel viewed.
20.  Play when in DVD, VCR, CD or DVR mode.
21.  Pause when in DVD, VCR, CD or DVR mode.
22.  Rewind when in DVD, VCR, CD or DVR mode.
23.  Fast-forward when in DVD, VCR, CD or DVR mode.
24.  Record when in DVD, VCR or DVR mode.
25.  Stop when in DVD, VCR, CD or DVR mode.
26.  Used for selecting options in the Foxtel menus.
27. **ASPECT** Change the aspect viewing ratio for your TV.
28. **HELP** Takes you instantly to the Foxtel Help Channel.
29. **0-9** Number pad for menus and changing channels.



skandia

PAY TV REMOTE

EW-8360

Congratulations! Your Universal Remote Control (URC) is a state-of-the-art device which integrates many different infra-red remote controls to deliver instant A/V action to your fingertips.

Before operating the remote, please read thoroughly (1) the inside of the coversheet and (2) this manual. Then store them for future reference.

1 HOW TO INSTALL THE BATTERIES

Alkaline batteries are recommended. The number of batteries required is stated on the back of the coversheet.

1. Remove the battery cover on the back of your URC.
2. Check the polarity of the batteries and the "+/-" marks inside the battery compartment.
3. Insert the batteries.
4. Push the battery cover back in place.

2 HOW TO SET UP THE URC

By entering Device Code

You may setup the URC by following the code entering instructions.

1. Referring to the DEVICE CODE LIST, look up the 4-digit Device Code which corresponds to the brand of your A/V equipment. If there is more than one Device Code listed under your brand, start from the first code.
2. Press the desired Device Mode Key (e.g. TV).
3. Hold down "CH +" and "VOL -" on the URC simultaneously for 2 seconds until the indicator light under the power key lights up.
4. Use the number keys "0" - "9" to enter your 4-digit Device Code. The indicator should go out immediately.

Turn on your device (e.g. TV), then try the function keys on the URC. If your device (e.g. TV) responds to your activated function correctly, you have entered the right Device Code. Otherwise, repeat the above steps with the next available Device Codes until your device (e.g. TV) responds to your activated function, and most keys work correctly.

* Simply repeat the above procedures to enter the Device Codes for your DVD and AUX devices. (Remember to press the correct Device Mode Key in step 2 above)

Note:

If the indicator light under the power key flashes twice in step 4, a wrong Device Code has been entered. You are required to repeat step 2 to 4 again.

Suggestion :

- If you cannot find a correct Device Code for your equipment, see **2 HOW TO SET UP THE URC - By Searching Through the Library.**
- For future reference you are recommended to take a note of your Device Codes in the space provided on the product's back label after setting up the URC correctly.

3 OPERATING THE URC

Normal Operation

Once you have set up the URC for your A/V equipment, it works like your original remote control. To operate, just aim it at your equipment, press an appropriate device mode key and invoke the desired function by pressing a corresponding key on the URC. The indicator light under the power key flashes during signal transmission and as confirmation of key touch.

Punch Through

Punch Through Channel

Punch through channel allows you to operate channel up and down without having to switch the device modes repeatedly even when your URC is in other operating modes.

To activate the punch through channel setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "CH +" key.
3. Press desired Device Mode Key (e.g. SAT).
4. Release "CH +" (the indicator light under the power key flashes once if the setting is activated).

To deactivate the punch through channel setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "CH -" key.
3. Press desired device Mode Key (e.g. SAT).
4. Release "CH -" (the indicator light under the power key flashes twice if the setting is activated).

Punch Through Volume

Punch through volume allows you to operate volume up and down without having to switch the device modes repeatedly even when your URC is in other operating modes.

To activate the punch through volume setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "VOL +" key.
3. Press desired Device Mode Key (e.g. SAT).
4. Release "VOL +" (the indicator light under the power key flashes once if the setting is activated).

To deactivate the punch through volume setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "VOL -" key.
3. Press desired Device Mode Key (e.g. SAT).
4. Release "VOL -" (the indicator light under the power key flashes twice if the setting is deactivated).

Macro Power

Macro Power allows you to turn two of your A/V equipment on/off simultaneously.

To activate the macro power setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "⏻" key.
3. Press desired Device Mode Key (e.g. SAT).
4. Release "⏻" (the indicator light under the power key flashes once if the setting is activated).

To deactivate the macro power setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "⏻" key.
3. Press desired Device Mode Key (e.g. SAT).
4. Release "⏻" (the indicator light under the power key flashes twice if the setting is deactivated).

4 MAINTENANCE

1. Do not expose your URC to dust, strong sunlight, humidity, high temperatures or mechanical shocks.
2. Do not use old and new batteries together as old batteries tend to leak.
3. Do not use corrosive or abrasive cleansers on your URC.
4. Keep the unit dust free by wiping it with a soft, dry cloth.
5. Do not disassemble your URC, it contains no user-serviceable parts.

5 TROUBLESHOOTING

Q. My URC does not work at all!

- A.** Check your A/V device, if the device's main switch is turned off, your URC cannot operate your device.
- A.** Check whether your batteries are inserted properly and are in the correct +/- position.
- A.** Check whether you have pressed the corresponding device mode key for your device.
- A.** If the batteries are low, replace the batteries.

Q. If several Device Codes are listed under the brand of my A/V device, how can I select the correct Device Code?

- A.** To seek the correct Device Code for your A/V device, test the codes one by one until most keys work properly.

Q. My A/V equipment responds only to some of the commands.

- A.** You have set a code for which only some commands work properly but some do not. Try other codes until most keys work properly.

SKANDIA PAY TV REMOTE
EW-8360

DEVICE	BRAND	CODE
TV	ACCENT	0301
TV	ACCENT	2551
TV	ACCENT	2791
TV	ACCUPHASE	2791
TV	ACEC	2741
TV	ACTION	0051
TV	ACTION	0301
TV	ACTION	2391
TV	ADCOM	2711
TV	ADMIRAL	0051
TV	ADMIRAL	0301
TV	ADMIRAL	0721
TV	ADMIRAL	0981
TV	ADMIRAL	1131
TV	ADMIRAL	1571
TV	ADMIRAL	2571
TV	ADYSON	0051
TV	ADYSON	2391
TV	AEA	2551
TV	AEA	2791
TV	AGEF	2571
TV	AIKO	0301
TV	AIKO	2551
TV	AIKO	2751
TV	AIKO	2791
TV	AIM	2551
TV	AIM	2791
TV	AKAI	0051
TV	AKAI	0301
TV	AKAI	0671
TV	AKAI	0741
TV	AKAI	0851
TV	AKAI	0871
TV	AKAI	0991
TV	AKAI	1001
TV	AKAI	1491
TV	AKAI	2371
TV	AKAI	2391
TV	AKAI	2551
TV	AKAI	2751
TV	AKAI	2791
TV	AKIBA	2551

SKANDIA PAY TV REMOTE
EW-8360

TV	AKIBA	2791
TV	AKITO	2551
TV	AKITO	2791
TV	AKURA	0051
TV	AKURA	0301
TV	AKURA	0891
TV	AKURA	2551
TV	AKURA	2791
TV	ALBA	0051
TV	ALBA	0301
TV	ALBA	1571
TV	ALBA	1681
TV	ALBA	2541
TV	ALBA	2551
TV	ALBA	2791
TV	ALBIRAL	1691
TV	ALFA	0051
TV	ALLORGAN	1901
TV	ALLSTAR	0051
TV	ALLSTAR	2551
TV	ALLSTAR	2791
TV	AMSTRAD	0301
TV	AMSTRAD	0981
TV	AMSTRAD	2551
TV	AMSTRAD	2791
TV	ANAM	2551
TV	ANAM	2791
TV	ANAM NATIONAL	2551
TV	ANAM NATIONAL	2791
TV	ANGLO	0301
TV	ANITECH	0051
TV	ANITECH	0301
TV	ANITECH	1111
TV	ANITECH	2391
TV	ANITECH	2551
TV	ANITECH	2581
TV	ANITECH	2791
TV	ANSONIC	0301
TV	ANSONIC	2551
TV	ANSONIC	2581
TV	ANSONIC	2631
TV	ANSONIC	2741
TV	ANSONIC	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	AOC	0051
TV	AOC	2391
TV	AR SYSTEM	1741
TV	AR SYSTEM	2551
TV	AR SYSTEM	2791
TV	ARC EN CIEL	1991
TV	ARC EN CIEL	2341
TV	ARC EN CIEL	2591
TV	ARC EN CIEL	2641
TV	ARC EN CIEL	2681
TV	ARCAM	2641
TV	ARDEM	2551
TV	ARDEM	2791
TV	ARISTONA	0051
TV	ARISTONA	2471
TV	ARISTONA	2551
TV	ARISTONA	2741
TV	ARISTONA	2791
TV	ART TECH	0051
TV	ARTHUR-MARTIN	0771
TV	ASA	1101
TV	ASA	1371
TV	ASA	1381
TV	ASA	1471
TV	ASA	2571
TV	ASBERG	0051
TV	ASBERG	1111
TV	ASBERG	1571
TV	ASBERG	2551
TV	ASBERG	2581
TV	ASBERG	2791
TV	ASORA	0301
TV	ASTRA	0301
TV	ASTRA	2551
TV	ASTRA	2791
TV	ATLANTIC	0051
TV	ATLANTIC	1901
TV	ATLANTIC	2551
TV	ATLANTIC	2791
TV	ATORI	0301
TV	ATORO	0301
TV	AUCHAN	0771
TV	AUDIOSONIC	0051

SKANDIA PAY TV REMOTE
EW-8360

TV	AUDIOSONIC	0301
TV	AUDIOSONIC	2551
TV	AUDIOSONIC	2591
TV	AUDIOSONIC	2631
TV	AUDIOSONIC	2791
TV	AUDIOTON	0301
TV	AUDIOVOX	0051
TV	AUTOVOX	1891
TV	AUTOVOX	1901
TV	AUTOVOX	2481
TV	AUTOVOX	2571
TV	AUTOVOX	2771
TV	AWA	0301
TV	AWA	2531
TV	AWA	2541
TV	AWA	2551
TV	AWA	2631
TV	AWA	2791
TV	BAIRD	2591
TV	BAIRD	2621
TV	BAIRD	2801
TV	BANG & OLUFSEN	2281
TV	BANG & OLUFSEN	2571
TV	BASIC LINE	0051
TV	BASIC LINE	0061
TV	BASIC LINE	0301
TV	BASIC LINE	2551
TV	BASIC LINE	2631
TV	BASIC LINE	2791
TV	BAUR	0051
TV	BAUR	0181
TV	BAUR	0301
TV	BAUR	0411
TV	BAUR	0421
TV	BAUR	0431
TV	BAUR	0441
TV	BAUR	0471
TV	BAUR	0791
TV	BAUR	1281
TV	BAUR	1291
TV	BAUR	1301
TV	BAUR	2551
TV	BAUR	2691

SKANDIA PAY TV REMOTE
EW-8360

TV	BAUR	2721
TV	BAUR	2751
TV	BAUR	2771
TV	BAUR	2781
TV	BAUR	2791
TV	BBK	3151
TV	BBK	3161
TV	BBK	3171
TV	BBK	3181
TV	BEC	0051
TV	BECRESE	0051
TV	BECRESE	2391
TV	BEKO	0051
TV	BEKO	1621
TV	BEKO	2021
TV	BEKO	2551
TV	BEKO	2791
TV	BELL & HOWELL	0051
TV	BENCHMARK-BEAUMARK	0051
TV	BENCHMARK-BEAUMARK	0301
TV	BENCHMARK-BEAUMARK	2391
TV	BEON	0051
TV	BEON	1571
TV	BEON	2551
TV	BEON	2791
TV	BESTAR	0051
TV	BESTAR	0801
TV	BESTAR	2551
TV	BESTAR	2631
TV	BESTAR	2791
TV	BESTAR-DAEWOO	2631
TV	BIGSTON	0301
TV	BLACK DIAMOND	2791
TV	BLACK PANTHER	2581
TV	BLAUPUNKT	1231
TV	BLAUPUNKT	1241
TV	BLAUPUNKT	1251
TV	BLAUPUNKT	1271
TV	BLAUPUNKT	1281
TV	BLAUPUNKT	1301
TV	BLAUPUNKT	1321
TV	BLAUPUNKT	1341
TV	BLAUPUNKT	2371

SKANDIA PAY TV REMOTE
EW-8360

TV	BLAUPUNKT	2441
TV	BLAUPUNKT	2451
TV	BLAUPUNKT	2751
TV	BLAUPUNLET	2781
TV	BLUE SKY	0051
TV	BLUE SKY	2551
TV	BLUE SKY	2791
TV	BONDSTEC	2481
TV	BOSCH	2441
TV	BPL	2551
TV	BPL	2791
TV	BRANDT	1991
TV	BRANDT	2591
TV	BRANDT	2601
TV	BRANDT	2611
TV	BRANDT	2621
TV	BRANDT	2641
TV	BRANDT	2661
TV	BRANDT	2681
TV	BRANDT	2711
TV	BRANDT ELECTRONIQUE	1801
TV	BRANDT ELECTRONIQUE	1851
TV	BRANDT ELECTRONIQUE	1991
TV	BRANDT ELECTRONIQUE	2341
TV	BRANDT ELECTRONIQUE	2601
TV	BRANDT ELECTRONIQUE	2611
TV	BRANDT ELECTRONIQUE	2681
TV	BRENDSTAR	0301
TV	BRINKMANN	1571
TV	BRINKMANN	2551
TV	BRINKMANN	2791
TV	BRIONVEGA	0051
TV	BRIONVEGA	0981
TV	BRIONVEGA	2551
TV	BRIONVEGA	2571
TV	BRIONVEGA	2791
TV	BRIORRYEGA	0051
TV	BROCKWOOD	2391
TV	BROKSONIC	2391
TV	BRUNS	2571
TV	BSR	0621
TV	BSR	0751
TV	BUSH	0051

SKANDIA PAY TV REMOTE
EW-8360

TV	BUSH	0621
TV	BUSH	0871
TV	BUSH	1681
TV	BUSH	2541
TV	BUSH	2551
TV	BUSH	2631
TV	BUSH	2771
TV	BUSH	2791
TV	CAMERON	3031
TV	CAMERON	3061
TV	CAMPLE	2391
TV	CANDLE	2391
TV	CAPEHART	0051
TV	CAPEHART	2391
TV	CARAD	2551
TV	CARAD	2791
TV	CARENA	2551
TV	CARENA	2791
TV	CARREFOUR	0051
TV	CARREFOUR	2541
TV	CARREFOUR	2551
TV	CARREFOUR	2791
TV	CARVER	0051
TV	CASCADE	2551
TV	CASCADE	2791
TV	CASIO	2551
TV	CASIO	2771
TV	CASIO	2791
TV	CATHAY	0051
TV	CATHAY	2551
TV	CATHAY	2791
TV	CCE	2551
TV	CCE	2791
TV	CENTURION	0051
TV	CENTURION	2551
TV	CENTURION	2791
TV	CENTURY	2201
TV	CENTURY	2571
TV	CENTURY	2761
TV	CGE	0301
TV	CGE	0691
TV	CGE	0871
TV	CGE	1111

SKANDIA PAY TV REMOTE
EW-8360

TV	CGE	1571
TV	CGE	2201
TV	CGE	2461
TV	CGE	2641
TV	CGM	0301
TV	CIE	0301
TV	CIMLINE	0301
TV	CIRCUIT CITY	2391
TV	CITIZEN	0051
TV	CITIZEN	2391
TV	CITY	0301
TV	CLARIVOX	2171
TV	CLARIVOX	2551
TV	CLARIVOX	2581
TV	CLARIVOX	2791
TV	CLATRONIC	0301
TV	CLATRONIC	1111
TV	CLATRONIC	1181
TV	CLATRONIC	2191
TV	CLATRONIC	2201
TV	CLATRONIC	2551
TV	CLATRONIC	2581
TV	CLATRONIC	2791
TV	COLORTYME	0051
TV	COMPUTRON	0301
TV	CONCORDE	0301
TV	CONDOR	0051
TV	CONDOR	0301
TV	CONDOR	1181
TV	CONDOR	1571
TV	CONDOR	2551
TV	CONDOR	2581
TV	CONDOR	2791
TV	CONIC	0051
TV	CONIC	2391
TV	CONRAD	2551
TV	CONRAD	2791
TV	CONTEC	0301
TV	CONTEC	2531
TV	CONTEC	2541
TV	CONTEC	2551
TV	CONTEC	2791
TV	CONTINENTAL EDISON	0331

SKANDIA PAY TV REMOTE
EW-8360

TV	CONTINENTAL EDISON	1801
TV	CONTINENTAL EDISON	1991
TV	CONTINENTAL EDISON	2341
TV	CONTINENTAL EDISON	2601
TV	CONTINENTAL EDISON	2641
TV	CONTINENTAL EDISON	2681
TV	CORONADO	2391
TV	COSMEL	0301
TV	COSMEL	2551
TV	COSMEL	2791
TV	CRAIG	0051
TV	CROSLEY	0051
TV	CROSLEY	0701
TV	CROSLEY	1111
TV	CROSLEY	2201
TV	CROSLEY	2571
TV	CROWN	0051
TV	CROWN	0301
TV	CROWN	1111
TV	CROWN	2391
TV	CROWN	2551
TV	CROWN	2791
TV	CRYSTAL	0051
TV	CTC CLATRONIC	1571
TV	CURTIS MATHES	0051
TV	CURTIS MATHES	2391
TV	DAEWOO	0051
TV	DAEWOO	0271
TV	DAEWOO	0281
TV	DAEWOO	0291
TV	DAEWOO	0301
TV	DAEWOO	1751
TV	DAEWOO	2391
TV	DAEWOO	2551
TV	DAEWOO	2631
TV	DAEWOO	2791
TV	DAICHI	0301
TV	DANSAI	2391
TV	DANSAI	2541
TV	DANSAI	2551
TV	DANSAI	2791
TV	DAWA	0051
TV	DAWA	2551

SKANDIA PAY TV REMOTE
EW-8360

TV	DAWA	2791
TV	DAYTRON	0301
TV	DAYTRON	2391
TV	DAYTRON	2551
TV	DAYTRON	2631
TV	DAYTRON	2791
TV	DECCA	0051
TV	DECCA	2141
TV	DECCA	2551
TV	DECCA	2791
TV	DEITRON	2551
TV	DEITRON	2631
TV	DEITRON	2791
TV	DENVER	0301
TV	DENVER	2551
TV	DENVER	2791
TV	DER	2801
TV	DESMET	0051
TV	DESMET	0301
TV	DESMET	2551
TV	DESMET	2571
TV	DESMET	2791
TV	DIAMANT	2551
TV	DIAMANT	2791
TV	DIAMOND	0301
TV	DIGILINE	2551
TV	DIGILINE	2791
TV	DIGITOR	2551
TV	DIGITOR	2791
TV	DIK	2551
TV	DIK	2791
TV	DIXI	0051
TV	DIXI	0301
TV	DIXI	2551
TV	DIXI	2571
TV	DIXI	2791
TV	DORIC	2771
TV	DSE	2871
TV	DSE	2891
TV	DSE	2901
TV	DSE	2911
TV	DSE	2921
TV	DTS	0301

SKANDIA PAY TV REMOTE
EW-8360

TV	DUAL	0051
TV	DUAL	0301
TV	DUAL	0981
TV	DUAL	1161
TV	DUAL	2551
TV	DUAL	2621
TV	DUAL	2641
TV	DUAL	2771
TV	DUAL	2791
TV	DUMONT	1571
TV	DUMONT	2391
TV	DUMONT	2571
TV	DUMONT	2581
TV	DUX	2551
TV	DUX	2741
TV	DUX	2791
TV	D-VISION	2551
TV	D-VISION	2791
TV	DYNAMIC	0301
TV	DYNATECH	2391
TV	DYNATRON	2551
TV	DYNATRON	2741
TV	DYNATRON	2791
TV	EDISON	2591
TV	ELBE	0711
TV	ELBE	0981
TV	ELBE	1151
TV	ELBE	2171
TV	ELBE	2551
TV	ELBE	2751
TV	ELBE	2761
TV	ELBE	2791
TV	ELBIT	0051
TV	ELCIT	2571
TV	ELCIT	2581
TV	ELECS	0051
TV	ELECTRATUNE	2391
TV	ELECTRO TECH	0301
TV	ELECTROHOME	2391
TV	ELECTRONIKA	0051
TV	ELEKTA	0301
TV	ELEKTA	2551
TV	ELEKTA	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	ELEKTRONIKA	0051
TV	ELENBERG	3001
TV	ELENBERG	3051
TV	ELG	2551
TV	ELG	2791
TV	ELIN	0051
TV	ELIN	0301
TV	ELIN	2551
TV	ELIN	2771
TV	ELIN	2791
TV	ELITE	0051
TV	ELITE	2391
TV	ELITE	2551
TV	ELITE	2791
TV	ELMAN	2021
TV	ELMAN	2581
TV	ELTA	0301
TV	ELTA	0801
TV	EMERSON	2391
TV	EMERSON	2551
TV	EMERSON	2571
TV	EMERSON	2791
TV	ENERGY SISTEM	2821
TV	ENERGY SISTEM	2831
TV	ERRES	0051
TV	ERRES	2471
TV	ERRES	2551
TV	ERRES	2741
TV	ERRES	2791
TV	ESC	2551
TV	ESC	2791
TV	ETRON	0301
TV	ETRON	0861
TV	ETRON	2551
TV	ETRON	2791
TV	EUROMAN	2551
TV	EUROMAN	2791
TV	EUROMANN	0051
TV	EUROPA	2551
TV	EUROPA	2791
TV	EUROPHON	0051
TV	EUROPHON	2151
TV	EUROPHON	2551

SKANDIA PAY TV REMOTE
EW-8360

TV	EUROPHON	2581
TV	EUROPHON	2791
TV	EXCEL	2551
TV	EXCEL	2791
TV	EXPERT	0771
TV	EXPERT	1901
TV	EXPERT	2011
TV	EXPERT (F)	0771
TV	EXPERT (F)	2011
TV	EXQUISIT	2551
TV	EXQUISIT	2791
TV	FAMILY LIFE	2551
TV	FAMILY LIFE	2791
TV	FENNER	0301
TV	FENNER	2631
TV	FERGUSON	1591
TV	FERGUSON	1841
TV	FERGUSON	1851
TV	FERGUSON	1921
TV	FERGUSON	1931
TV	FERGUSON	1941
TV	FERGUSON	1951
TV	FERGUSON	2021
TV	FERGUSON	2061
TV	FERGUSON	2131
TV	FERGUSON	2171
TV	FERGUSON	2551
TV	FERGUSON	2591
TV	FERGUSON	2601
TV	FERGUSON	2611
TV	FERGUSON	2621
TV	FERGUSON	2661
TV	FERGUSON	2701
TV	FERGUSON	2711
TV	FERGUSON	2761
TV	FERGUSON	2791
TV	FERGUSON	2801
TV	FIDELIS	0301
TV	FIDELITY	0841
TV	FIDELITY	2551
TV	FIDELITY	2791
TV	FIDELITY	2801
TV	FILSAI	0301

SKANDIA PAY TV REMOTE
EW-8360

TV	FINLANDIA	1051
TV	FINLANDIA	1471
TV	FINLANDIA	2601
TV	FINLANDIA	2621
TV	FINLUX	0051
TV	FINLUX	0301
TV	FINLUX	0621
TV	FINLUX	1081
TV	FINLUX	1101
TV	FINLUX	1371
TV	FINLUX	1381
TV	FINLUX	1441
TV	FINLUX	1451
TV	FINLUX	1471
TV	FINLUX	1501
TV	FINLUX	1521
TV	FINLUX	1571
TV	FINLUX	1821
TV	FINLUX	2141
TV	FINLUX	2551
TV	FINLUX	2571
TV	FINLUX	2581
TV	FINLUX	2791
TV	FIRST LINE	0051
TV	FIRST LINE	0301
TV	FIRST LINE	2551
TV	FIRST LINE	2581
TV	FIRST LINE	2631
TV	FIRST LINE	2761
TV	FIRST LINE	2771
TV	FIRST LINE	2791
TV	FISHER	0261
TV	FISHER	2221
TV	FISHER	2311
TV	FISHER	2541
TV	FISHER	2571
TV	FISHER	2771
TV	FLINT	0051
TV	FLINT	2551
TV	FLINT	2791
TV	FNR	2581
TV	FORGESTONE	2801
TV	FORMENTI	0051

SKANDIA PAY TV REMOTE
EW-8360

TV	FORMENTI	2551
TV	FORMENTI	2571
TV	FORMENTI	2791
TV	FORTRESS	2391
TV	FORTRESS	2571
TV	FRABA	2551
TV	FRABA	2791
TV	FRIAC	2551
TV	FRIAC	2581
TV	FRIAC	2791
TV	FRONTECH	0301
TV	FRONTECH	2401
TV	FRONTECH	2771
TV	FUJITSU	0751
TV	FUJITSU	1901
TV	FUJITSU	2391
TV	FUJITSU	2551
TV	FUJITSU	2581
TV	FUJITSU	2791
TV	FUJITSU GENERAL	0751
TV	FUJITSU GENERAL	0981
TV	FUJITSU GENERAL	1901
TV	FUNAI	0301
TV	FUNAI	2391
TV	FUTURE	2551
TV	FUTURE	2791
TV	GALAXI	2551
TV	GALAXI	2581
TV	GALAXI	2791
TV	GALAXIS	1181
TV	GALAXIS	1571
TV	GALAXIS	2551
TV	GALAXIS	2581
TV	GALAXIS	2791
TV	GALAXY	1181
TV	GALAXY	1571
TV	GALERIA	0301
TV	GBC	0301
TV	GBC	0701
TV	GBC	0721
TV	GBC	2161
TV	GBC	2631
TV	GE	2591

SKANDIA PAY TV REMOTE
EW-8360

TV	GE	2601
TV	GE	2611
TV	GE	2621
TV	GE	2701
TV	GEANT CASIONO	0771
TV	GEC	0661
TV	GEC	2551
TV	GEC	2561
TV	GEC	2771
TV	GEC	2791
TV	GELOSO	0301
TV	GELOSO	2201
TV	GELOSO	2631
TV	GEMSOUND	0301
TV	GENERAL	0301
TV	GENERAL	2591
TV	GENERAL	2601
TV	GENERAL	2661
TV	GENERAL ELECTRIC	2601
TV	GENERAL ELECTRIC	2621
TV	GENERAL TECHNIC	0301
TV	GENEXXA	0051
TV	GENEXXA	2551
TV	GENEXXA	2791
TV	GITEM	0051
TV	GM	0301
TV	GMG	0301
TV	GMG	1571
TV	GOLDHAND	0301
TV	GOLDSTAR	0051
TV	GOLDSTAR	0301
TV	GOLDSTAR	0621
TV	GOLDSTAR	1131
TV	GOLDSTAR	1241
TV	GOLDSTAR	1631
TV	GOLDSTAR	2391
TV	GOLDSTAR	2481
TV	GOLDSTAR	2551
TV	GOLDSTAR	2591
TV	GOLDSTAR	2791
TV	GOODMANS	0051
TV	GOODMANS	0301
TV	GOODMANS	1681

SKANDIA PAY TV REMOTE
EW-8360

TV	GOODMANS	1951
TV	GOODMANS	2321
TV	GOODMANS	2541
TV	GOODMANS	2551
TV	GOODMANS	2611
TV	GOODMANS	2621
TV	GOODMANS	2631
TV	GOODMANS	2701
TV	GOODMANS	2791
TV	GPM	0301
TV	GRADIENTE	2551
TV	GRADIENTE	2791
TV	GRADIN	0051
TV	GRADIN	0301
TV	GRAETZ	0661
TV	GRAETZ	0731
TV	GRAETZ	0861
TV	GRAETZ	1051
TV	GRAETZ	2551
TV	GRAETZ	2791
TV	GRANADA	0051
TV	GRANADA	0361
TV	GRANADA	0641
TV	GRANADA	0931
TV	GRANADA	1511
TV	GRANADA	1951
TV	GRANADA	2411
TV	GRANADA	2541
TV	GRANADA	2551
TV	GRANADA	2611
TV	GRANADA	2621
TV	GRANADA	2701
TV	GRANADA	2741
TV	GRANADA	2791
TV	GRANDIN	0771
TV	GRANDIN	2011
TV	GRANDIN	2551
TV	GRANDIN	2631
TV	GRANDIN	2791
TV	GRANDIN	3251
TV	GRANDIN	3271
TV	GRANDIN	3281
TV	GRANDIN	3291

SKANDIA PAY TV REMOTE
EW-8360

TV	GRANDIN	3301
TV	GRANDIN	3311
TV	GRANDIN	3321
TV	GRANDIN	3331
TV	GRANDIN	3341
TV	GRANDIN	3351
TV	GRANDIN	3361
TV	GRANDIN	3371
TV	GRANDIN	3381
TV	GRANDIN	3391
TV	GRANDIN	3401
TV	GRANDIN	3411
TV	GRANDIN	3421
TV	GRANDIN	3431
TV	GRANDIN	3441
TV	GRANDIN	3451
TV	GRANDIN	3461
TV	GRANDIN	3471
TV	GRANDIN	3481
TV	GRANDIN	3491
TV	GRANDIN	3501
TV	GRANDIN	3511
TV	GRANDIN	3521
TV	GRANDIN	3541
TV	GRANDIN	3551
TV	GRANDIN	3561
TV	GRANDIN	3571
TV	GRENADIER	0301
TV	GRONIC	2581
TV	GRUNDIG	0331
TV	GRUNDIG	1211
TV	GRUNDIG	1221
TV	GRUNDIG	1231
TV	GRUNDIG	1241
TV	GRUNDIG	1251
TV	GRUNDIG	1261
TV	GRUNDIG	1271
TV	GRUNDIG	1281
TV	GRUNDIG	1301
TV	GRUNDIG	1311
TV	GRUNDIG	1321
TV	GRUNDIG	1331
TV	GRUNDIG	1341

SKANDIA PAY TV REMOTE
EW-8360

TV	GRUNDIG	1351
TV	GRUNDIG	2541
TV	GRUNDIG	2551
TV	GRUNDIG	2751
TV	GRUNDIG	2781
TV	GRUNDIG	2791
TV	GTT	0301
TV	GTT	1571
TV	HALLMARK	2391
TV	HANSEATIC	0051
TV	HANSEATIC	0301
TV	HANSEATIC	1161
TV	HANSEATIC	2551
TV	HANSEATIC	2571
TV	HANSEATIC	2771
TV	HANSEATIC	2791
TV	HANTAREX	0051
TV	HANTAREX	0301
TV	HANTAREX	2161
TV	HANTAREX	2551
TV	HANTAREX	2581
TV	HANTAREX	2791
TV	HANTOR	2551
TV	HANTOR	2791
TV	HARLEY DAVIDSON	2391
TV	HARLEY DAVIDSON	2561
TV	HARRAD	2391
TV	HARVARD	2391
TV	HARWOOD	2551
TV	HARWOOD	2791
TV	HAUPPAUGE	2551
TV	HAUPPAUGE	2791
TV	HCM	0301
TV	HCM	2551
TV	HEATHKIT	0051
TV	HEDZON	2551
TV	HEDZON	2791
TV	HEMMERMANN	2771
TV	HIFIVOX	1991
TV	HIFIVOX	2341
TV	HIFIVOX	2591
TV	HIFIVOX	2641
TV	HIFIVOX	2681

SKANDIA PAY TV REMOTE
EW-8360

TV	HIGHLINE	2551
TV	HIGHLINE	2791
TV	HILINE	0301
TV	HINARI	0051
TV	HINARI	0301
TV	HINARI	0861
TV	HINARI	2321
TV	HINARI	2541
TV	HINARI	2551
TV	HINARI	2791
TV	HIT	2571
TV	HITACHI	0051
TV	HITACHI	0631
TV	HITACHI	0661
TV	HITACHI	0671
TV	HITACHI	0781
TV	HITACHI	0791
TV	HITACHI	0921
TV	HITACHI	0991
TV	HITACHI	1051
TV	HITACHI	1501
TV	HITACHI	1791
TV	HITACHI	1991
TV	HITACHI	2391
TV	HITACHI	2521
TV	HITACHI	2541
TV	HITACHI	2551
TV	HITACHI	2561
TV	HITACHI	2591
TV	HITACHI	2621
TV	HITACHI	2771
TV	HITACHI	2791
TV	HMV	2571
TV	HORIZONT	0051
TV	HORIZONT	3091
TV	HORIZONT	3131
TV	HORIZONT	3141
TV	HORNYPHON	0051
TV	HORNYPHONE	2551
TV	HORNYPHONE	2741
TV	HORNYPHONE	2791
TV	HUANYU	2631
TV	HUSPI ELEKTRONIK	1571

SKANDIA PAY TV REMOTE
EW-8360

TV	HYPER	0301
TV	HYPER	2481
TV	HYPSON	0051
TV	HYPSON	0301
TV	HYPSON	2551
TV	HYPSON	2761
TV	HYPSON	2791
TV	IBERIA	2551
TV	IBERIA	2791
TV	ICE	0051
TV	ICE	0301
TV	ICE	2551
TV	ICE	2791
TV	ICOS	2741
TV	ICT	2551
TV	ICT	2791
TV	IMA	2391
TV	IMPERIAL	0051
TV	IMPERIAL	0611
TV	IMPERIAL	0691
TV	IMPERIAL	0871
TV	IMPERIAL	1111
TV	IMPERIAL	1181
TV	IMPERIAL	1571
TV	IMPERIAL	2201
TV	IMPERIAL	2551
TV	IMPERIAL	2771
TV	IMPERIAL	2791
TV	INDIANA	0051
TV	INDIANA	2551
TV	INDIANA	2791
TV	INFINITY	0051
TV	INGELEN	1621
TV	INGERSOLL	0301
TV	INNO HIT	0051
TV	INNO HIT	0301
TV	INNO HIT	1131
TV	INNO HIT	2151
TV	INNO HIT	2551
TV	INNO HIT	2581
TV	INNO HIT	2791
TV	INNOHIT	0051
TV	INNOHIT	0301

SKANDIA PAY TV REMOTE
EW-8360

TV	INNOHIT	1131
TV	INNOVATION	2551
TV	INNOVATION	2791
TV	INTERACTIVE	2551
TV	INTERACTIVE	2571
TV	INTERACTIVE	2591
TV	INTERACTIVE	2681
TV	INTERACTIVE	2741
TV	INTERACTIVE	2791
TV	INTERBUY	0301
TV	INTERBUY	2551
TV	INTERBUY	2791
TV	INTERDISCOUNT	0051
TV	INTERFUNK	0051
TV	INTERFUNK	0661
TV	INTERFUNK	0741
TV	INTERFUNK	0861
TV	INTERFUNK	0901
TV	INTERFUNK	1181
TV	INTERFUNK	1571
TV	INTERFUNK	2231
TV	INTERFUNK	2241
TV	INTERFUNK	2441
TV	INTERFUNK	2451
TV	INTERFUNK	2471
TV	INTERFUNK	2551
TV	INTERFUNK	2571
TV	INTERFUNK	2591
TV	INTERFUNK	2681
TV	INTERFUNK	2741
TV	INTERFUNK	2771
TV	INTERFUNK	2791
TV	INTERNAL	2551
TV	INTERNAL	2631
TV	INTERNAL	2791
TV	INTERVISION	0801
TV	INTERVISION	2551
TV	INTERVISION	2581
TV	INTERVISION	2791
TV	IRRADIO	0051
TV	IRRADIO	0301
TV	IRRADIO	1081
TV	IRRADIO	1131

SKANDIA PAY TV REMOTE
EW-8360

TV	IRRADIO	2481
TV	IRRADIO	2551
TV	IRRADIO	2791
TV	IST	0051
TV	ISUKAI	0051
TV	ISUKAI	2551
TV	ISUKAI	2791
TV	ITL	0301
TV	ITS	0301
TV	ITS	2551
TV	ITS	2791
TV	ITT	0721
TV	ITT	0911
TV	ITT	2771
TV	ITT	2801
TV	ITT NOKIA	2771
TV	ITV	2551
TV	ITV	2631
TV	ITV	2791
TV	JBL	0051
TV	JEAN	2541
TV	JETPOINT	0051
TV	JINLIPIU	0301
TV	JMB	2551
TV	JMB	2631
TV	JMB	2791
TV	JOCEL	0091
TV	JOCEL	0341
TV	JULIBEE	2791
TV	JUMBOTRONIC	0051
TV	JVC	0051
TV	JVC	0491
TV	JVC	0501
TV	JVC	0511
TV	JVC	0521
TV	JVC	0531
TV	JVC	0541
TV	JVC	0551
TV	JVC	2541
TV	JVC	2801
TV	K?RTING	2211
TV	K?RTING	2241
TV	KAISER	0051

SKANDIA PAY TV REMOTE
EW-8360

TV	KAISUI	0051
TV	KAISUI	0301
TV	KAISUI	2551
TV	KAISUI	2791
TV	KAPSCH	0661
TV	KAPSCH	1901
TV	KARCHER	0051
TV	KARCHER	0301
TV	KARCHER	2551
TV	KARCHER	2581
TV	KARCHER	2791
TV	KATHREIN	2551
TV	KATHREIN	2791
TV	KENDO	0051
TV	KENDO	0301
TV	KENDO	0711
TV	KENDO	0981
TV	KENDO	1901
TV	KENDO	2551
TV	KENDO	2581
TV	KENDO	2791
TV	KENNEDY	0981
TV	KENNEDY	1901
TV	KENWOOD	2391
TV	KIOTA	0301
TV	KITION	2791
TV	KITON	2551
TV	KLH	2391
TV	KNEISSEL	1161
TV	KNEISSEL	2551
TV	KNEISSEL	2631
TV	KNEISSEL	2761
TV	KNEISSEL	2791
TV	KOBIC	0301
TV	KOLSTER	0051
TV	KOLSTER	2551
TV	KOLSTER	2581
TV	KOLSTER	2771
TV	KOLSTER	2791
TV	KONICHI	0301
TV	KONKA	2551
TV	KONKA	2791
TV	KONKA	2971

SKANDIA PAY TV REMOTE
EW-8360

TV	KONKA	2981
TV	KONKA	2991
TV	KORPEL	0051
TV	KORPEL	2551
TV	KORPEL	2791
TV	KORTING	2211
TV	KORTING	2241
TV	KORTING	2571
TV	KOSMOS	2551
TV	KOSMOS	2791
TV	KRAKING	2761
TV	KRIESLER	2741
TV	KTV	2391
TV	KUASHO	0051
TV	KUASHO	2391
TV	KUBA	2771
TV	KUBA ELECTRONIC	2771
TV	L?GIK	0251
TV	L?GIK	2351
TV	LEADER	0301
TV	LECSON	2551
TV	LECSON	2791
TV	LEGEND	0301
TV	LENCO	0051
TV	LENCO	0301
TV	LENCO	0321
TV	LENCO	2551
TV	LENCO	2631
TV	LENCO	2791
TV	LENOIR	0301
TV	LEVIS AUSTRIA	2551
TV	LEVIS AUSTRIA	2791
TV	LEYCO	0051
TV	LEYCO	2551
TV	LEYCO	2791
TV	LG	2551
TV	LG	2591
TV	LG	2791
TV	LG	2931
TV	LG	2941
TV	LG	2951
TV	LG	2961
TV	LIESENK & TTER	2551

SKANDIA PAY TV REMOTE
EW-8360

TV	LIESENK & TTER	2791
TV	LIESENK?TTER	0051
TV	LIESENK?TTER	2441
TV	LIESENKOTTER	0051
TV	LIESENKOTTER	2551
TV	LIESENKOTTER	2741
TV	LIESENKOTTER	2791
TV	LIFE	0301
TV	LIFETEC	0301
TV	LIFETEC	2551
TV	LIFETEC	2631
TV	LIFETEC	2791
TV	LINITRON	2391
TV	LLOYD	2391
TV	LLOYD'S	0301
TV	LOEWE	0051
TV	LOEWE	2251
TV	LOEWE	2551
TV	LOEWE	2571
TV	LOEWE	2791
TV	LOGIK	2531
TV	LOGIK	2551
TV	LOGIK	2791
TV	LOGIK	2801
TV	LUMA	0051
TV	LUMA	0301
TV	LUMA	0721
TV	LUMA	0981
TV	LUMA	1901
TV	LUMA	2551
TV	LUMA	2631
TV	LUMA	2791
TV	LUMATRON	2551
TV	LUMATRON	2791
TV	LUX MAY	0051
TV	LUX MAY	2551
TV	LUX MAY	2791
TV	LUXOR	0631
TV	LUXOR	0671
TV	LUXOR	0741
TV	LUXOR	0781
TV	LUXOR	0791
TV	LUXOR	0811

SKANDIA PAY TV REMOTE
EW-8360

TV	LUXOR	0901
TV	LUXOR	0991
TV	LUXOR	1001
TV	LUXOR	1031
TV	LUXOR	1041
TV	LUXOR	1051
TV	LUXOR	1131
TV	LUXOR	1371
TV	LUXOR	1441
TV	LUXOR	1471
TV	LUXOR	1501
TV	LUXOR	1521
TV	LUXOR	2771
TV	LUXOR SALORA	2001
TV	LUXOR/SKANTIC	0991
TV	LXI	0051
TV	M ELECTRONIC	0301
TV	M ELECTRONIC	1501
TV	M ELECTRONICS	0051
TV	M ELECTRONICS	0301
TV	M ELECTRONICS	1471
TV	M ELECTRONICS	2021
TV	MACYS	2391
TV	MADISON	2551
TV	MADISON	2791
TV	MAGNADYNE	0051
TV	MAGNADYNE	0301
TV	MAGNADYNE	0701
TV	MAGNADYNE	1571
TV	MAGNADYNE	2151
TV	MAGNADYNE	2191
TV	MAGNADYNE	2201
TV	MAGNADYNE	2571
TV	MAGNADYNE	2581
TV	MAGNAFON	2151
TV	MAGNAFON	2581
TV	MAGNASONIC	0051
TV	MAGNASONIC	0301
TV	MAGNASONIC	2391
TV	MAGNAVOX	0051
TV	MAGNAVOX	2541
TV	MAGNAVOX	2551
TV	MAGNAVOX	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	MAGNUM	0171
TV	MAGNUM	2551
TV	MAGNUM	2791
TV	MANESTH	0051
TV	MANESTH	2551
TV	MANESTH	2791
TV	MANHATTAN	2551
TV	MANHATTAN	2791
TV	MARANTZ	0051
TV	MARANTZ	2551
TV	MARANTZ	2791
TV	MARELLI	2571
TV	MARK	0051
TV	MARK	2551
TV	MARK	2631
TV	MARK	2791
TV	MASUDA	2551
TV	MASUDA	2791
TV	MATSUI	0051
TV	MATSUI	0301
TV	MATSUI	0311
TV	MATSUI	0331
TV	MATSUI	0611
TV	MATSUI	1241
TV	MATSUI	1731
TV	MATSUI	2531
TV	MATSUI	2541
TV	MATSUI	2551
TV	MATSUI	2611
TV	MATSUI	2751
TV	MATSUI	2771
TV	MATSUI	2791
TV	MAVA	2391
TV	MAXAM	0301
TV	MAXELL	0301
TV	MCE	0301
TV	MCMICHAEL	2561
TV	MEDIATOR	0051
TV	MEDIATOR	2471
TV	MEDIATOR	2551
TV	MEDIATOR	2741
TV	MEDIATOR	2791
TV	MEDION	0201

SKANDIA PAY TV REMOTE
EW-8360

TV	MEDION	2551
TV	MEDION	2791
TV	MELECTRONIC	1411
TV	MELECTRONIC	1541
TV	MELECTRONIC	2551
TV	MELECTRONIC	2591
TV	MELECTRONIC	2601
TV	MELECTRONIC	2621
TV	MELECTRONIC	2631
TV	MELECTRONIC	2751
TV	MELECTRONIC	2771
TV	MELECTRONIC	2791
TV	MEMOREX	0301
TV	MEMPHIS	0301
TV	MERCURY	0301
TV	MERCURY	2551
TV	MERCURY	2791
TV	METZ	1191
TV	METZ	1241
TV	METZ	1281
TV	METZ	1301
TV	METZ	1331
TV	METZ	2231
TV	METZ	2551
TV	METZ	2571
TV	METZ	2751
TV	METZ	2781
TV	METZ	2791
TV	MGA	2551
TV	MGA	2791
TV	MICROMAXX	2551
TV	MICROMAXX	2791
TV	MIDLAND	2391
TV	MINATO	2551
TV	MINATO	2791
TV	MINERVA	1241
TV	MINERVA	1301
TV	MINERVA	2751
TV	MINERVA	2781
TV	MINOKA	0051
TV	MINOKA	2551
TV	MINOKA	2791
TV	MISTRAL ELECTRONIC	2801

SKANDIA PAY TV REMOTE
EW-8360

TV	MITSUBISHI	0051
TV	MITSUBISHI	0301
TV	MITSUBISHI	2301
TV	MITSUBISHI	2311
TV	MITSUBISHI	2411
TV	MITSUBISHI	2421
TV	MITSUBISHI	2511
TV	MITSUBISHI	2541
TV	MITSUBISHI	2551
TV	MITSUBISHI	2571
TV	MITSUBISHI	2791
TV	MITSUBISHI	2801
TV	MIVAR	1131
TV	MIVAR	1151
TV	MIVAR	1161
TV	MIVAR	2161
TV	MIVAR	2181
TV	MORGAN'S	2551
TV	MORGAN'S	2791
TV	MOTOROLA	0051
TV	MTC	2391
TV	MTC	2771
TV	MULTIBROADCAST	2801
TV	MULTISTANDARD	2581
TV	MULTITEC	2551
TV	MULTITEC	2791
TV	MULTITECH	0051
TV	MULTITECH	0301
TV	MULTITECH	1111
TV	MULTITECH	2391
TV	MULTITECH	2551
TV	MULTITECH	2581
TV	MULTITECH	2771
TV	MULTITECH	2791
TV	MUSIKLAND	2551
TV	MUSIKLAND	2791
TV	MYRYAD	2551
TV	MYRYAD	2791
TV	NAIKO	2551
TV	NAIKO	2791
TV	NAKIMURA	2551
TV	NAKIMURA	2631
TV	NAKIMURA	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	NAMSUNC	0301
TV	NAONIS	0721
TV	NATIONAL	0051
TV	NATIONAL	0351
TV	NEC	0301
TV	NEC	2531
TV	NEC	2541
TV	NEC	2551
TV	NEC	2631
TV	NEC	2791
TV	NECKERMANN	0051
TV	NECKERMANN	0301
TV	NECKERMANN	0431
TV	NECKERMANN	0441
TV	NECKERMANN	0501
TV	NECKERMANN	0791
TV	NECKERMANN	0921
TV	NECKERMANN	0981
TV	NECKERMANN	1181
TV	NECKERMANN	1241
TV	NECKERMANN	1261
TV	NECKERMANN	1281
TV	NECKERMANN	1301
TV	NECKERMANN	1331
TV	NECKERMANN	2151
TV	NECKERMANN	2441
TV	NECKERMANN	2451
TV	NECKERMANN	2551
TV	NECKERMANN	2571
TV	NECKERMANN	2691
TV	NECKERMANN	2721
TV	NECKERMANN	2751
TV	NECKERMANN	2771
TV	NECKERMANN	2781
TV	NECKERMANN	2791
TV	NEI	0051
TV	NEI	1721
TV	NEI	2551
TV	NEI	2791
TV	NETSAT	2551
TV	NETSAT	2791
TV	NEUFUNK	2551
TV	NEUFUNK	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	NEWTECH	0051
TV	NEWTECH	0301
TV	NEWTECH	2551
TV	NEWTECH	2621
TV	NEWTECH	2791
TV	NIKKAI	0051
TV	NIKKAI	2391
TV	NIKKAI	2541
TV	NIKKAI	2551
TV	NIKKAI	2791
TV	NIKKO	1711
TV	NOBLEX	0261
TV	NOBLEX	0301
TV	NOBLIKO	1081
TV	NOBLIKO	1111
TV	NOBLIKO	2581
TV	NOGAMATIC	1991
TV	NOGAMATIC	2341
TV	NOGAMATIC	2591
TV	NOGAMATIC	2641
TV	NOGAMATIC	2681
TV	NOKIA	0241
TV	NOKIA	0301
TV	NOKIA	0631
TV	NOKIA	0661
TV	NOKIA	0671
TV	NOKIA	0721
TV	NOKIA	0731
TV	NOKIA	0741
TV	NOKIA	0811
TV	NOKIA	0831
TV	NOKIA	0861
TV	NOKIA	0901
TV	NOKIA	0931
TV	NOKIA	0991
TV	NOKIA	1001
TV	NOKIA	1041
TV	NOKIA	1051
TV	NOKIA	1401
TV	NOKIA	1421
TV	NOKIA	1431
TV	NOKIA	1481
TV	NOKIA	1501

SKANDIA PAY TV REMOTE
EW-8360

TV	NOKIA	1511
TV	NOKIA	1521
TV	NOKIA	1541
TV	NOKIA	1571
TV	NOKIA	1821
TV	NOKIA	2591
TV	NOKIA	2631
TV	NOKIA	2771
TV	NOKIA AKAI	0851
TV	NONAME	0051
TV	NORDMENDE	1791
TV	NORDMENDE	1811
TV	NORDMENDE	1851
TV	NORDMENDE	1861
TV	NORDMENDE	1871
TV	NORDMENDE	1921
TV	NORDMENDE	1961
TV	NORDMENDE	1991
TV	NORDMENDE	2021
TV	NORDMENDE	2051
TV	NORDMENDE	2341
TV	NORDMENDE	2551
TV	NORDMENDE	2591
TV	NORDMENDE	2601
TV	NORDMENDE	2611
TV	NORDMENDE	2621
TV	NORDMENDE	2641
TV	NORDMENDE	2661
TV	NORDMENDE	2681
TV	NORDMENDE	2701
TV	NORDMENDE	2791
TV	NORMEREL	2551
TV	NORMEREL	2791
TV	NOVABEAM	0051
TV	NOVAK	2741
TV	NOVATRONIC	0051
TV	NOVATRONIC	0301
TV	NOVATRONIC	2551
TV	NOVATRONIC	2631
TV	NOVATRONIC	2791
TV	O GENERAL	0301
TV	OCEANIC	0771
TV	OCEANIC	0811

SKANDIA PAY TV REMOTE
EW-8360

TV	OCEANIC	0991
TV	OCEANIC	1051
TV	OCEANIC	1501
TV	OCEANIC	1521
TV	OCEANIC	2011
TV	OKANO	0301
TV	OKANO	2551
TV	OKANO	2791
TV	OLYMPIC	0301
TV	ONCEAS	0301
TV	ONWA	2581
TV	OPERA	0051
TV	OPERA	2551
TV	OPERA	2791
TV	ORBIT	0051
TV	ORBIT	2551
TV	ORBIT	2791
TV	ORIENT	0301
TV	ORION	0051
TV	ORION	0121
TV	ORION	0131
TV	ORION	0141
TV	ORION	0151
TV	ORION	0301
TV	ORION	0961
TV	ORION	0971
TV	ORION	2111
TV	ORION	2391
TV	ORION	2531
TV	ORION	2551
TV	ORION	2581
TV	ORION	2791
TV	ORLINE	2551
TV	ORLINE	2791
TV	ORMOND	2551
TV	ORMOND	2791
TV	OSAKI	2551
TV	OSAKI	2631
TV	OSAKI	2791
TV	OSIO	2551
TV	OSIO	2791
TV	OSUME	2541
TV	OSUME	2551

SKANDIA PAY TV REMOTE
EW-8360

TV	OSUME	2791
TV	OTF	0301
TV	OTTO VERSAND	0051
TV	OTTO VERSAND	0301
TV	OTTO VERSAND	0411
TV	OTTO VERSAND	0421
TV	OTTO VERSAND	0431
TV	OTTO VERSAND	0441
TV	OTTO VERSAND	0451
TV	OTTO VERSAND	0621
TV	OTTO VERSAND	0791
TV	OTTO VERSAND	0801
TV	OTTO VERSAND	1261
TV	OTTO VERSAND	1271
TV	OTTO VERSAND	1281
TV	OTTO VERSAND	1331
TV	OTTO VERSAND	2021
TV	OTTO VERSAND	2371
TV	OTTO VERSAND	2481
TV	OTTO VERSAND	2541
TV	OTTO VERSAND	2551
TV	OTTO VERSAND	2591
TV	OTTO VERSAND	2621
TV	OTTO VERSAND	2691
TV	OTTO VERSAND	2721
TV	OTTO VERSAND	2751
TV	OTTO VERSAND	2771
TV	OTTO VERSAND	2781
TV	OTTO VERSAND	2791
TV	OTTO-VERSAND	0051
TV	OTTO-VERSAND	0301
TV	OTTO-VERSAND	0441
TV	OTTO-VERSAND	0471
TV	OTTO-VERSAND	0561
TV	OTTO-VERSAND	0801
TV	OTTO-VERSAND	1241
TV	OTTO-VERSAND	1261
TV	OTTO-VERSAND	1301
TV	OTTO-VERSAND	1631
TV	OTTO-VERSAND	2021
TV	OTTO-VERSAND	2111
TV	OTTO-VERSAND	2371
TV	PACIFIC	0091

SKANDIA PAY TV REMOTE
EW-8360

TV	PACIFIC	0101
TV	PACIFIC	2551
TV	PACIFIC	2791
TV	PAEL	1081
TV	PALLADIUM	0051
TV	PALLADIUM	1281
TV	PALLADIUM	2551
TV	PALLADIUM	2571
TV	PALLADIUM	2691
TV	PALLADIUM	2721
TV	PALLADIUM	2751
TV	PALLADIUM	2771
TV	PALLADIUM	2781
TV	PALLADIUM	2791
TV	PALSONIC	2551
TV	PALSONIC	2791
TV	PANAMA	0301
TV	PANAMA	2551
TV	PANAMA	2791
TV	PANASHIBA	0301
TV	PANASONIC	0051
TV	PANASONIC	0351
TV	PANASONIC	0361
TV	PANASONIC	0371
TV	PANASONIC	0381
TV	PANASONIC	0391
TV	PANASONIC	1191
TV	PANASONIC	2361
TV	PANASONIC	2371
TV	PANASONIC	2551
TV	PANASONIC	2791
TV	PANAVISION	2551
TV	PANAVISION	2791
TV	PANAVOX	0301
TV	PANORAMA	0301
TV	PATHE CINEMA	1161
TV	PATHE CINEMA	2761
TV	PATHE CINEMA	2771
TV	PATHE MARCONI	1991
TV	PATHE MARCONI	2341
TV	PATHE MARCONI	2591
TV	PATHE MARCONI	2641
TV	PATHE MARCONI	2681

SKANDIA PAY TV REMOTE
EW-8360

TV	PAUSA	0301
TV	PCE/PEC	2391
TV	PENNEY	2391
TV	PERDIO	2551
TV	PERDIO	2791
TV	PERFEKT	0051
TV	PERFEKT	2551
TV	PERFEKT	2791
TV	PHILCO	0051
TV	PHILCO	0301
TV	PHILCO	0691
TV	PHILCO	0701
TV	PHILCO	1111
TV	PHILCO	1181
TV	PHILCO	1571
TV	PHILCO	2201
TV	PHILCO	2551
TV	PHILCO	2571
TV	PHILCO	2791
TV	PHILEX	2801
TV	PHILIPS	2551
TV	PHILIPS	2561
TV	PHILIPS	2571
TV	PHILIPS	2621
TV	PHILIPS	2631
TV	PHILIPS	2651
TV	PHILIPS	2741
TV	PHILIPS	2751
TV	PHILIPS	2761
TV	PHILIPS	2781
TV	PHILIPS	2791
TV	PHILIPS	2801
TV	PHILIPS	2811
TV	PHILIPS (F)	0051
TV	PHILIPS (F)	2471
TV	PHOENIX	0051
TV	PHOENIX	2551
TV	PHOENIX	2571
TV	PHOENIX	2791
TV	PHONOLA	0051
TV	PHONOLA	2471
TV	PHONOLA	2551
TV	PHONOLA	2571

SKANDIA PAY TV REMOTE
EW-8360

TV	PHONOLA	2741
TV	PHONOLA	2791
TV	PHONOLA	2801
TV	PILOT	2551
TV	PILOT	2791
TV	PIONEER	0051
TV	PIONEER	0761
TV	PIONEER	1791
TV	PIONEER	2551
TV	PIONEER	2591
TV	PIONEER	2601
TV	PIONEER	2621
TV	PIONEER	2651
TV	PIONEER	2791
TV	PLANTRON	0051
TV	PLANTRON	0301
TV	PLANTRON	2551
TV	PLANTRON	2791
TV	POLICOM	2571
TV	POLICOM	2581
TV	POLICOM	2591
TV	POLICOM	2681
TV	POLICOM	2761
TV	POPPY	0301
TV	PORTLAND	2391
TV	PORTLAND	2631
TV	PRANDONI PRINCE	0721
TV	PRANDONI PRINCE	1081
TV	PRANDONI-PRINCE	2151
TV	PRIMA	0051
TV	PRIMA	0301
TV	PRIMA	2391
TV	PRINCESS	0301
TV	PRINZ	2771
TV	PROELCO	0051
TV	PROFEX	0301
TV	PROFEX	0801
TV	PROFEX	1111
TV	PROFITRONIC	0051
TV	PROFITRONIC	2551
TV	PROFITRONIC	2581
TV	PROFITRONIC	2791
TV	PROLINE	2551

SKANDIA PAY TV REMOTE
EW-8360

TV	PROLINE	2711
TV	PROLINE	2741
TV	PROLINE	2791
TV	PROSONIC	2551
TV	PROSONIC	2631
TV	PROSONIC	2791
TV	PROTEC	0051
TV	PROTEC	0301
TV	PROTECH	2551
TV	PROTECH	2581
TV	PROTECH	2771
TV	PROTECT	2791
TV	PROTON	0301
TV	PROTON	2391
TV	PROVISION	2551
TV	PROVISION	2791
TV	PULSER	0051
TV	PULSER	0301
TV	PULSER	2391
TV	PYE	0051
TV	PYE	2551
TV	PYE	2571
TV	PYE	2631
TV	PYE	2741
TV	PYE	2771
TV	PYE	2781
TV	PYE	2791
TV	PYMI	0301
TV	QUELLE	0051
TV	QUELLE	0301
TV	QUELLE	0411
TV	QUELLE	0421
TV	QUELLE	0431
TV	QUELLE	0441
TV	QUELLE	0451
TV	QUELLE	0471
TV	QUELLE	0501
TV	QUELLE	0621
TV	QUELLE	0871
TV	QUELLE	0981
TV	QUELLE	0991
TV	QUELLE	1081
TV	QUELLE	1101

SKANDIA PAY TV REMOTE
EW-8360

TV	QUELLE	1131
TV	QUELLE	1241
TV	QUELLE	1271
TV	QUELLE	1281
TV	QUELLE	1301
TV	QUELLE	1331
TV	QUELLE	1371
TV	QUELLE	1381
TV	QUELLE	1451
TV	QUELLE	1471
TV	QUELLE	1521
TV	QUELLE	1661
TV	QUELLE	1671
TV	QUELLE	1901
TV	QUELLE	2311
TV	QUELLE	2371
TV	QUELLE	2391
TV	QUELLE	2441
TV	QUELLE	2451
TV	QUELLE	2461
TV	QUELLE	2481
TV	QUELLE	2531
TV	QUELLE	2541
TV	QUELLE	2551
TV	QUELLE	2591
TV	QUELLE	2681
TV	QUELLE	2691
TV	QUELLE	2721
TV	QUELLE	2751
TV	QUELLE	2771
TV	QUELLE	2781
TV	QUELLE	2791
TV	QUESTA	2541
TV	R LINE	0051
TV	R LINE	2551
TV	R LINE	2791
TV	RADIALVA	2551
TV	RADIALVA	2591
TV	RADIALVA	2601
TV	RADIALVA	2791
TV	RADIO SHACK	2391
TV	RADIO SHACK	2551
TV	RADIO SHACK	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	RADIOLA	0051
TV	RADIOLA	2471
TV	RADIOLA	2551
TV	RADIOLA	2741
TV	RADIOLA	2791
TV	RADIOMARELLI	2151
TV	RADIOMARELLI	2551
TV	RADIOMARELLI	2571
TV	RADIOMARELLI	2791
TV	RADIOSTONE	2791
TV	RADIOTONE	0051
TV	RADIOTONE	0301
TV	RADIOTONE	2551
TV	RADUGA	3141
TV	RANK ARENA	2541
TV	RANK/BUSH/MURPHY	1141
TV	RCA	2611
TV	RCA	2621
TV	RCA	2701
TV	RCA	2711
TV	RECOR	2551
TV	RECOR	2791
TV	RECORD	0051
TV	RECORD	3141
TV	RECTILIGNE	2551
TV	RECTILIGNE	2791
TV	REDIFFUSION	2541
TV	REDSTAR	2551
TV	REDSTAR	2791
TV	REFLEX	2551
TV	REFLEX	2791
TV	REGENTE	0301
TV	REVOX	0051
TV	REVOX	2551
TV	REVOX	2791
TV	REVOX/STUDER	0051
TV	REX	0711
TV	REX	0751
TV	REX	0981
TV	REX	1161
TV	REX	1901
TV	REX	2201
TV	RFT	1161

SKANDIA PAY TV REMOTE
EW-8360

TV	RFT	2551
TV	RFT	2571
TV	RFT	2791
TV	RICOH	2551
TV	RICOH	2791
TV	RMB	2391
TV	ROADSTAR	0301
TV	ROADSTAR	2551
TV	ROADSTAR	2791
TV	ROBOTRON	2571
TV	RODEX	2551
TV	RODEX	2791
TV	ROSITA	0301
TV	ROWA	0301
TV	ROYAL	0301
TV	ROYAL LUX	2611
TV	RUBIN	3101
TV	RUBIN	3141
TV	RUKOPIR	2551
TV	RUKOPIR	2791
TV	SABA	0661
TV	SABA	0861
TV	SABA	1791
TV	SABA	1801
TV	SABA	1811
TV	SABA	1851
TV	SABA	1991
TV	SABA	2021
TV	SABA	2031
TV	SABA	2041
TV	SABA	2151
TV	SABA	2331
TV	SABA	2341
TV	SABA	2571
TV	SABA	2591
TV	SABA	2601
TV	SABA	2611
TV	SABA	2621
TV	SABA	2641
TV	SABA	2661
TV	SABA	2681
TV	SABA	2701
TV	SABA	2711

SKANDIA PAY TV REMOTE
EW-8360

TV	SACCS	2761
TV	SADKO	3141
TV	SAISHO	0051
TV	SAISHO	2531
TV	SAIVOD	2551
TV	SAIVOD	2791
TV	SAKURA	0301
TV	SALORA	0631
TV	SALORA	0641
TV	SALORA	0741
TV	SALORA	0791
TV	SALORA	0811
TV	SALORA	0921
TV	SALORA	0991
TV	SALORA	1001
TV	SALORA	1041
TV	SALORA	1051
TV	SALORA	1131
TV	SALORA	1471
TV	SALORA	1491
TV	SALORA	1501
TV	SALORA	1521
TV	SALORA	1541
TV	SALORA	1821
TV	SALORA	2771
TV	SALSA	2611
TV	SAMBERS	1081
TV	SAMBERS	1111
TV	SAMBERS	1131
TV	SAMBERS	2151
TV	SAMBERS	2581
TV	SAMPO	2391
TV	SAMSUNG	0051
TV	SAMSUNG	0161
TV	SAMSUNG	0181
TV	SAMSUNG	0261
TV	SAMSUNG	0301
TV	SAMSUNG	1131
TV	SAMSUNG	1661
TV	SAMSUNG	2391
TV	SAMSUNG	2401
TV	SAMSUNG	2551
TV	SAMSUNG	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	SAMSUX	2391
TV	SANELA	2761
TV	SANKY	2391
TV	SANSUI	0051
TV	SANSUI	0301
TV	SANSUI	2391
TV	SANSUI	2551
TV	SANSUI	2791
TV	SANYO	0301
TV	SANYO	1161
TV	SANYO	1671
TV	SANYO	2311
TV	SANYO	2531
TV	SANYO	2541
TV	SANYO	2551
TV	SANYO	2791
TV	SAVE	2551
TV	SAVE	2791
TV	SBR	0051
TV	SBR	2471
TV	SBR	2551
TV	SBR	2561
TV	SBR	2741
TV	SBR	2791
TV	SBR	2801
TV	SCHAUB LORENZ	0991
TV	SCHAUB LORENZ	1051
TV	SCHAUB LORENZ	2631
TV	SCHAUB LORENZ	2771
TV	SCHNEIDER	0051
TV	SCHNEIDER	0161
TV	SCHNEIDER	0171
TV	SCHNEIDER	0301
TV	SCHNEIDER	0861
TV	SCHNEIDER	0941
TV	SCHNEIDER	0981
TV	SCHNEIDER	1161
TV	SCHNEIDER	2471
TV	SCHNEIDER	2481
TV	SCHNEIDER	2551
TV	SCHNEIDER	2621
TV	SCHNEIDER	2741
TV	SCHNEIDER	2771

SKANDIA PAY TV REMOTE
EW-8360

TV	SCHNEIDER	2791
TV	SCHNEIDER (F)	2471
TV	SCOTT	2391
TV	SEG	0301
TV	SEG	0471
TV	SEG	1111
TV	SEG	2391
TV	SEG	2541
TV	SEG	2551
TV	SEG	2581
TV	SEG	2771
TV	SEG	2791
TV	SEI	2551
TV	SEI	2571
TV	SEI	2581
TV	SEI	2691
TV	SEI	2721
TV	SEI	2771
TV	SEI	2791
TV	SEI-SINUDYNE	0051
TV	SEI-SINUDYNE	0701
TV	SEI-SINUDYNE	2551
TV	SEI-SINUDYNE	2571
TV	SEI-SINUDYNE	2581
TV	SEI-SINUDYNE	2691
TV	SEI-SINUDYNE	2721
TV	SEI-SINUDYNE	2791
TV	SELECO	0711
TV	SELECO	0721
TV	SELECO	0751
TV	SELECO	0981
TV	SELECO	1011
TV	SELECO	1161
TV	SELECO	1761
TV	SELECO	1881
TV	SELECO	1891
TV	SELECO	1901
TV	SELECO	2001
TV	SELECO	2311
TV	SELECO	2541
TV	SEMUA	2391
TV	SENCORA	0301
TV	SENTRA	0861

SKANDIA PAY TV REMOTE
EW-8360

TV	SENTRA	2771
TV	SHARP	0561
TV	SHARP	0571
TV	SHARP	0581
TV	SHARP	0591
TV	SHARP	0601
TV	SHARP	2311
TV	SHARP	2391
TV	SHARP	2541
TV	SHARP	2801
TV	SHARP	2841
TV	SHINTOSHI	2551
TV	SHINTOSHI	2791
TV	SHIVAKI	0051
TV	SHIVAKI	2551
TV	SHIVAKI	2631
TV	SHIVAKI	2791
TV	SHOW	0301
TV	SIAREM	0701
TV	SIAREM	2161
TV	SIAREM	2571
TV	SIAREM	2581
TV	SICATEL	1181
TV	SICATEL	1551
TV	SICATEL-FRANCE-S	1551
TV	SIEMENS	0051
TV	SIEMENS	1241
TV	SIEMENS	1251
TV	SIEMENS	1261
TV	SIEMENS	1271
TV	SIEMENS	1281
TV	SIEMENS	1291
TV	SIEMENS	1301
TV	SIEMENS	1331
TV	SIEMENS	2291
TV	SIEMENS	2391
TV	SIEMENS	2441
TV	SIEMENS	2451
TV	SIEMENS	2551
TV	SIEMENS	2751
TV	SIEMENS	2781
TV	SIEMENS	2791
TV	SIERA	2551

SKANDIA PAY TV REMOTE
EW-8360

TV	SIERA	2741
TV	SIERA	2791
TV	SIERRA	0051
TV	SIERRA	2471
TV	SILMA	0051
TV	SILVA	0301
TV	SILVA	2551
TV	SILVA	2791
TV	SILVER	2541
TV	SILVER	2551
TV	SILVER	2791
TV	SINGER	0051
TV	SINGER	0301
TV	SINGER	0941
TV	SINGER	2011
TV	SINGER	2191
TV	SINGER	2201
TV	SINGER	2551
TV	SINGER	2571
TV	SINGER	2581
TV	SINGER	2611
TV	SINGER	2791
TV	SINUDYNE	0051
TV	SINUDYNE	0471
TV	SINUDYNE	0721
TV	SINUDYNE	0941
TV	SINUDYNE	0981
TV	SINUDYNE	2111
TV	SINUDYNE	2551
TV	SINUDYNE	2571
TV	SINUDYNE	2581
TV	SINUDYNE	2691
TV	SINUDYNE	2721
TV	SINUDYNE	2771
TV	SINUDYNE	2791
TV	SKY	2551
TV	SKY	2791
TV	SMARAGD	0331
TV	SNYDER	0051
TV	SOKOL	3141
TV	SOLAVOX	0861
TV	SOLAVOX	2551
TV	SOLAVOX	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	SONIKO	2551
TV	SONIKO	2791
TV	SONNECLAIR	2551
TV	SONNECLAIR	2791
TV	SONOKO	0051
TV	SONOKO	0301
TV	SONOKO	2551
TV	SONOKO	2791
TV	SONOLOR	0771
TV	SONOLOR	0811
TV	SONOLOR	0991
TV	SONOLOR	2011
TV	SONOLOR	2691
TV	SONOLOR	2721
TV	SONTEC	0051
TV	SONTEC	2551
TV	SONTEC	2791
TV	SONY	2531
TV	SONY	2541
TV	SONY	2551
TV	SONY	2581
TV	SONY	2691
TV	SONY	2721
TV	SONY	2731
TV	SONY	2791
TV	SOUND & VISION	2551
TV	SOUND & VISION	2581
TV	SOUND & VISION	2631
TV	SOUND & VISION	2791
TV	SOUNDESIGN	2391
TV	SOUNDMASTER	0301
TV	SOUNDWAVE	2551
TV	SOUNDWAVE	2791
TV	SPECTRICIAN	0051
TV	SPECTRICIAN	2391
TV	STANDARD	0301
TV	STANDARD	2551
TV	STANDARD	2631
TV	STANDARD	2791
TV	STARLITE	0301
TV	STARLITE	2551
TV	STARLITE	2791
TV	STARLUX	0301

SKANDIA PAY TV REMOTE
EW-8360

TV	STERN	0711
TV	STERN	0751
TV	STERN	0981
TV	STERN	1161
TV	STERN	1901
TV	STRATO	2551
TV	STRATO	2791
TV	SUNIC LINE	2551
TV	SUNIC LINE	2791
TV	SUNKAI	2551
TV	SUNKAI	2791
TV	SUNSTAR	0301
TV	SUNSTAR	2551
TV	SUNSTAR	2791
TV	SUNWOOD	0051
TV	SUNWOOD	0301
TV	SUNWOOD	2551
TV	SUNWOOD	2791
TV	SUPERTEC	0301
TV	SUPERTECH	0301
TV	SUPERTECH	0871
TV	SUPERTECH	2551
TV	SUPERTECH	2791
TV	SUPRA	0301
TV	SUPRA	2631
TV	SUPREMACY	2391
TV	SUSUMU	2601
TV	SUSUMU	2611
TV	SUTRON	0301
TV	SYC LINE	0301
TV	SYLVANIA	0051
TV	SYMPHONIC	2391
TV	SYSLINE	2551
TV	SYSLINE	2791
TV	TANDBERG	0981
TV	TANDBERG	1191
TV	TANDBERG	2591
TV	TASHIKO	2321
TV	TASHIKO	2541
TV	TASHIKO	2561
TV	TATUNG	0051
TV	TATUNG	0191
TV	TATUNG	2531

SKANDIA PAY TV REMOTE
EW-8360

TV	TATUNG	2551
TV	TATUNG	2791
TV	TEAC	2551
TV	TEAC	2771
TV	TEAC	2791
TV	TEAK	0301
TV	TEC	0301
TV	TEC	0751
TV	TEC	0871
TV	TEC	0981
TV	TEC	1721
TV	TEC	2551
TV	TEC	2611
TV	TEC	2661
TV	TEC	2791
TV	TECH LINE	2551
TV	TECH LINE	2791
TV	TECHNICS	0051
TV	TECHNICS	0351
TV	TECHNILAND	0051
TV	TECHNISAT	1771
TV	TECHNISAT	2551
TV	TECHNISAT	2791
TV	TECHNOL	0301
TV	TECHWOOD	3481
TV	TECHWOOD	3531
TV	TECNISON	0301
TV	TEDELEX	0301
TV	TEDELEX	2551
TV	TEDELEX	2791
TV	TEKNANT	0051
TV	TEKNANT	0301
TV	TEKNIKA	2391
TV	TEKON	0301
TV	TELEAVIA	1991
TV	TELEAVIA	2121
TV	TELEAVIA	2341
TV	TELEAVIA	2591
TV	TELEAVIA	2601
TV	TELEAVIA	2621
TV	TELEAVIA	2641
TV	TELEAVIA	2671
TV	TELEAVIA	2681

SKANDIA PAY TV REMOTE
EW-8360

TV	TELECOR	2551
TV	TELECOR	2791
TV	TELEFAC	0301
TV	TELEFUNKEN	1701
TV	TELEFUNKEN	1851
TV	TELEFUNKEN	1911
TV	TELEFUNKEN	1951
TV	TELEFUNKEN	1961
TV	TELEFUNKEN	1971
TV	TELEFUNKEN	2021
TV	TELEFUNKEN	2041
TV	TELEFUNKEN	2091
TV	TELEFUNKEN	2431
TV	TELEFUNKEN	2461
TV	TELEFUNKEN	2551
TV	TELEFUNKEN	2591
TV	TELEFUNKEN	2601
TV	TELEFUNKEN	2611
TV	TELEFUNKEN	2621
TV	TELEFUNKEN	2641
TV	TELEFUNKEN	2661
TV	TELEFUNKEN	2681
TV	TELEFUNKEN	2711
TV	TELEFUNKEN	2791
TV	TELEFUSION	2551
TV	TELEFUSION	2791
TV	TELEGAZI	2551
TV	TELEGAZI	2791
TV	TELEMEISTER	2551
TV	TELEMEISTER	2791
TV	TELEOPTA	0301
TV	TELESONIC	2551
TV	TELESONIC	2791
TV	TELESTAR	0301
TV	TELESTAR	2551
TV	TELESTAR	2791
TV	TELETECH	0301
TV	TELETECH	2551
TV	TELETECH	2791
TV	TELETON	0751
TV	TELETON	1901
TV	TELETON	2541
TV	TELETON	2771

SKANDIA PAY TV REMOTE
EW-8360

TV	TELEVIEW	2551
TV	TELEVIEW	2791
TV	TELEVISIO	2011
TV	TELEXA	2581
TV	TEMPEST	0301
TV	TEMPEST	2551
TV	TEMPEST	2791
TV	TENNESSEE	2551
TV	TENNESSEE	2791
TV	TENSAI	0051
TV	TENSAI	0301
TV	TENSAI	0621
TV	TENSAI	1631
TV	TENSAI	2551
TV	TENSAI	2631
TV	TENSAI	2791
TV	TENSON	0301
TV	TESLA	0051
TV	TESLA ORAVA	0051
TV	TEVION	2551
TV	TEVION	2791
TV	TEXET	2631
TV	THOMAS	0051
TV	THOMAS	0301
TV	THOMAS	2391
TV	THOMSON	2551
TV	THOMSON	2591
TV	THOMSON	2601
TV	THOMSON	2611
TV	THOMSON	2621
TV	THOMSON	2641
TV	THOMSON	2661
TV	THOMSON	2671
TV	THOMSON	2681
TV	THOMSON	2701
TV	THOMSON	2711
TV	THOMSON	2771
TV	THOMSON	2791
TV	THOMSON	3041
TV	THORN	0041
TV	THORN	0051
TV	THORN	0251
TV	THORN	0741

SKANDIA PAY TV REMOTE
EW-8360

TV	THORN	0861
TV	THORN	0921
TV	THORN	1081
TV	THORN	1591
TV	THORN	1971
TV	THORN	2131
TV	THORN	2171
TV	THORN	2311
TV	THORN	2351
TV	THORN	2411
TV	THORN	2471
TV	THORN	2551
TV	THORN	2591
TV	THORN	2611
TV	THORN	2621
TV	THORN	2631
TV	THORN	2691
TV	THORN	2721
TV	THORN	2761
TV	THORN	2791
TV	THORN	2801
TV	THORN-FERGUSON	0051
TV	THORN-FERGUSON	0251
TV	THORN-FERGUSON	0981
TV	THORN-FERGUSON	1591
TV	THORN-FERGUSON	2021
TV	THORN-FERGUSON	2131
TV	THORN-FERGUSON	2171
TV	THORN-FERGUSON	2351
TV	THORN-FERGUSON	2591
TV	THORN-FERGUSON	2611
TV	THORN-FERGUSON	2761
TV	THORN-FERGUSON	2801
TV	TOBO	0301
TV	TOKAI	0051
TV	TOKAI	2551
TV	TOKAI	2631
TV	TOKAI	2791
TV	TOSHIBA	0001
TV	TOSHIBA	0011
TV	TOSHIBA	0021
TV	TOSHIBA	0031
TV	TOSHIBA	0041

SKANDIA PAY TV REMOTE
EW-8360

TV	TOSHIBA	1141
TV	TOSHIBA	2541
TV	TOSHIBA	2581
TV	TOSHIBA	2591
TV	TOSHIBA	2671
TV	TOSHIBA	2751
TV	TOSONIC	2391
TV	TOTEVISION	2391
TV	TOWADA	2581
TV	TOWADA	2771
TV	TRANS CONTINENS	2551
TV	TRANS CONTINENS	2791
TV	TRANSONIC	2551
TV	TRANSONIC	2791
TV	TREVI	0301
TV	TRIAD	0051
TV	TRIAD	2551
TV	TRIAD	2791
TV	TRILUX	0051
TV	TRISTAR	2801
TV	TRIUMPH	2551
TV	TRIUMPH	2791
TV	TRIVISION	0301
TV	TVTEXT 95	2791
TV	UHER	0051
TV	UHER	1901
TV	UHER	2551
TV	UHER	2631
TV	UHER	2791
TV	ULTRAFOX	2201
TV	ULTRAVOX	0701
TV	ULTRAVOX	2191
TV	ULTRAVOX	2201
TV	ULTRAVOX	2551
TV	ULTRAVOX	2571
TV	ULTRAVOX	2581
TV	ULTRAVOX	2631
TV	ULTRAVOX	2791
TV	UMA	0051
TV	UNIC LINE	2551
TV	UNIC LINE	2771
TV	UNIC LINE	2791
TV	UNIMOR	0051

SKANDIA PAY TV REMOTE
EW-8360

TV	UNITED	2551
TV	UNITED	2791
TV	UNIVERSUM	0051
TV	UNIVERSUM	0301
TV	UNIVERSUM	1281
TV	UNIVERSUM	1411
TV	UNIVERSUM	1471
TV	UNIVERSUM	1541
TV	UNIVERSUM	1681
TV	UNIVERSUM	1901
TV	UNIVERSUM	2441
TV	UNIVERSUM	2531
TV	UNIVERSUM	2541
TV	UNIVERSUM	2551
TV	UNIVERSUM	2591
TV	UNIVERSUM	2681
TV	UNIVERSUM	2691
TV	UNIVERSUM	2721
TV	UNIVERSUM	2771
TV	UNIVERSUM	2781
TV	UNIVERSUM	2791
TV	UNIVOX	2551
TV	UNIVOX	2571
TV	UNIVOX	2761
TV	UNIVOX	2791
TV	URANYA	0301
TV	VANGUARD	0301
TV	VECO	0301
TV	VESTEL	0051
TV	VESTEL	0061
TV	VESTEL	1681
TV	VESTEL	2551
TV	VESTEL	2791
TV	VEXA	0051
TV	VEXA	0301
TV	VEXA	2551
TV	VEXA	2791
TV	VIDEO SYSTEM	0051
TV	VIDEO SYSTEM	2551
TV	VIDEO SYSTEM	2791
TV	VIDEOTECHNIC	2631
TV	VIDEOTON	0631
TV	VIDEOTON	0651

SKANDIA PAY TV REMOTE
EW-8360

TV	VIDEOTON	0961
TV	VIDEOTON	1571
TV	VIDEOTON	1791
TV	VIDEOTON	2081
TV	VIDEOTON	2121
TV	VIDIKRON	2581
TV	VIDION	0301
TV	VIDTECH	2541
TV	VISION	0301
TV	VISION	2551
TV	VISION	2791
TV	VISON	0051
TV	VITYAZ	3141
TV	VORTEC	0051
TV	VORTEC	2551
TV	VORTEC	2791
TV	VOXSON	0051
TV	VOXSON	0721
TV	VOXSON	2551
TV	VOXSON	2571
TV	VOXSON	2791
TV	WALTHAM	0631
TV	WALTHAM	0961
TV	WALTHAM	2121
TV	WALTHAM	2551
TV	WALTHAM	2591
TV	WALTHAM	2601
TV	WALTHAM	2671
TV	WALTHAM	2791
TV	WARDS	0051
TV	WATSON	0051
TV	WATSON	0301
TV	WATSON	2551
TV	WATSON	2791
TV	WATT RADIO	0701
TV	WATT RADIO	1571
TV	WATT RADIO	2581
TV	WATT RADIO	2771
TV	WEGA	2221
TV	WEGA	2541
TV	WEGA	2551
TV	WEGA	2571
TV	WEGA	2791

SKANDIA PAY TV REMOTE
EW-8360

TV	WEGAVOX	0051
TV	WEGAVOX	0301
TV	WEGAVOX	1571
TV	WEGAVOX	2551
TV	WEGAVOX	2791
TV	WELTBlick	0051
TV	WELTBlick	2551
TV	WELTBlick	2791
TV	WESTON	2551
TV	WESTON	2791
TV	WHARFEDALE	2551
TV	WHARFEDALE	2791
TV	WHITE WESTINGHOUSE	0051
TV	WHITE WESTINGHOUSE	1571
TV	WHITE WESTINGHOUSE	2551
TV	WHITE WESTINGHOUSE	2791
TV	WINSTON	0051
TV	WINSTON	0301
TV	WINTERNITZ	0301
TV	WORLDVIEW	0051
TV	WORLDVIEW	0301
TV	XRYPTON	2551
TV	XRYPTON	2791
TV	YAMISHI	2551
TV	YAMISHI	2791
TV	YOKAN	2551
TV	YOKAN	2791
TV	YOKO	0051
TV	YOKO	0301
TV	YOKO	2201
TV	YOKO	2551
TV	YOKO	2791
TV	YORK	0051
TV	ZANUSSI	0721
TV	ZANUSSI	1901
TV	ZENITH	0051