


Quick set up instructions

1. With the equipment switched on, choose the device (e.g. TV)
2. Aim remote at the device, press and hold “⏻” and “⏮” together until status indicator lights up.
3. Press “⏻” key to start the Automatic Code Search.
 - Mark sure that you keep the remote control pointed at your equipment
 - Pressing the “⏻” will speed up the search
4. When the right code is found the equipment switches off.

Immediately press the “⏮” key to top the search and lock in the code. The indicator flashes twice.

If the device switches off and the indicator flashed again this means you have missed the correct code. Simply switch the equipment back on manually and press “P-” a couple of times. Slowly press the “⏻” key repeatedly until the equipment switches off.

5. Switch the device on manually, and press a few keys to check for correct response. If the response is not correct, repeat the above procedure again to find the correct code.

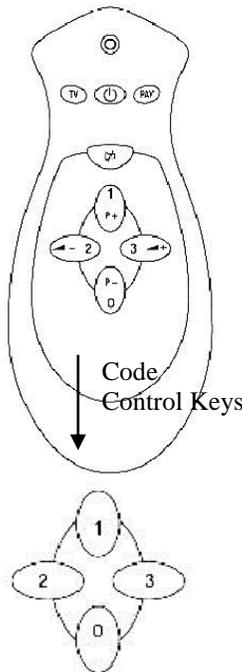

How to set up the URC (Universal Remote Control) by device code

1. Look up the brand name of the equipment in the code list (e.g. Sony TV, code 000321)
 2. Make sure the equipment is switched on.
 3. Aim your remote at the equipment. Press and hold down “⏻” and “⏮” together until the indicator light up.
 4. Using the Code Control Keys enter the 6 digit code within 30 seconds. The indicator should flash twice.
(e.g. Sony TV, code 000321)
 5. Your equipment should switch off.
 6. Switch you equipment back on manually, and check that it responds correctly. If it does not, repeat the above setup with the next code, until the device responds correctly.
- If you device is not in the code list then try the Automatic Code Search.

Codes for Popular Brand of old Pay TV Boxes:

Optus	023313			
Foxtel	021023	030223	030233	030303
	030323	031033	030333	030313
Austar	021033	030213		

For technical support: www.remotemaser.com.au or call 1300
788466