

Contents

Introduction	2
Battery Installation	3
Recognize the Keys	4
Set up Your Remote Control	
Direct Setup	5
Setup by Auto Search	6
Setup by Learning	7
Other Set-up	
A. Set up Clock	8
B. Volume lock	9
C. Device lock	10
D. Background Adjust	10
E. Contrast Adjust	11
F. All off function	11
G. Macro function	12
H. Delete Macro function	13
I. Device Alternation	13
J. FAV FUNCTION	14
K. SLEEP TIMER	16
L. TIMER1/2/3	17
M. KEYBOARD LOCK	17
Clear all	18
Need Help?	18
Device Brand Code List	
TV	19
VCR	35
CBL/SAT	43
CD	50
DVD	52
TAPE	55
TUNER	56
AUX	57

Introduction

Thank you for purchasing the BW-LCD universal remote control. It features the largest infrared code library for European and Australian markets. Based on our (patent pending) creative design, it has the easiest and fastest way to “set up directly” by the brand name and code no. in it’s LCD screen.

The BW-LCD universal remote control works with most brands of Televisions (TV), DVD-players (DVD), **DVR**-players (**DVD**), **DVB** (CBL/SAT), (digital) Satellite receivers (CBL/SAT), Cable box (CBL/SAT), Video Recorders (VCR), Tuner receivers (TUNER), Tape receivers (TAPE), CD-players (CD), Audio amplifiers (AMP) and other Audio (AUX).The universal remote control operates all main functions of your BW-LCD device.

You can use “Auto Search” to scan the code library if your device is not listed.

BW-LCD can “learn” a new code from an original remote control.

”FAV channel setup”: can store a list of up to 15 favorite channels, in any order, they are immediately scanned when you press FAV.

”Sleep timer” function: can turn off the device automatically on a preset time which you can program 0-99 minutes.

“TIMER” function: can turn on or off the device automatically on a preset time which you can program any time in 24 hours.

“Keyboard lock” to lock all keys, then no operation can be done.

“All off” function can switch off all your devices with one button.

“Macro” function makes several sequent operations with one button for your home theater

“Volume lock” can fix VOL+/VOL- button to control Amplifier only for your home theater.

“Device lock” can fix the device set up until you unlock it.

BW-LCD has a backlight for LCD screen and separate device

backlight to show you the currently working device, it also has backlight for VOL+/VOL-, CH+/CH-, and 0-9.

All the set up data will be stored in “back up memory” permanently; you don’t need to be worry about data loss when you replace battery.

The BW-LCD also has a “real time clock” to show current time.

All above mentioned functions confirm the BW-LCD is an advanced, very powerful LCD universal remote control. Please read this user manual carefully prior to using your new LCD remote control.

List:

Bank	for Device	Initial code	Total of codes
TV	TV	042	488
VCR	VCR	115	182
CBL/SAT	Satellite,Cable,DVB	045	403
DVD	DVD,DVR	006	192
CD	CD	098	124
TUNER	TUNER	075	114
TAPE	TAPE	083	134
AUX	AMP, LD	030	204

Total of codes: 1841

Battery Installation

This remote control needs 2 x AAA batteries to work.

Refer to the direction mark inside the battery apartment and put 2 new AAA batteries in the battery compartment. Alkaline batteries are recommended.

To install the batteries:

1. Turn the remote over, and lift the battery cover off.
2. Insert the batteries matching the batteries to the (+) and (-) marks inside the battery case.
3. Slide the battery cover back into place.

All data you have programmed into the unit will be stored in the memory even if you take out the batteries, but you will need to set the clock again.

CAUTION:

- Keep battery away from small children.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of the batteries in fire; batteries may explode or leak.
- Remove batteries if not used for a prolonged period of time.
- Dispose of batteries responsibly.

Realize the Keys

SET— For you to start to set up the remote control or show you the status in LCD screen.

TV, VCR, CBL/SAT, CD, DVD, TUNER, TAPE, AUX—Let you select the device you want to control.



—Turns the device on and off.

0-9—The number keys operate the same as on your original remote control, and are used for entering device codes when set up.



— Works like the “**enter**” on your original remote.

AV — Works like the TV/Video key on your original TV remote, and TV/SAT key on your original satellite remote A.B in cable and CD modes.

MENU —Works like the Menu or OSD (on-screen display) or Memory key on your original remote control.

CH± —Works like the Channel Up and Down keys on your original remote control.

VOL± —Control the volume like the Volume Up and Down on your original remote control.



Key to mute the sound



REW (fast reverse)



PLAY (operate your DVD, CD etc)



FFWD (fast forward)



REC (Record)



STOP (terminate your operation)



PAUSE

▲ ▼ ◀ ▶, OK, EXIT----- Works like the **UP, DOWN, LEFT, RIGHT, OK, EXIT** Keys on your original remote control for menu function. Bbut during set up mode they are used for cursor, confirm and exit to program your remote control only.





RED, GREEN, YELLOW and BLUE----- for TV Fast Text.

All off -----Switches off all your device only with one button.

Macro----- Let you make sequent operation for you home theater.

FAV-----Favorite channel

LEARN----Learning key

-  Television video
-  TV and text mixed
-  Teletext mode
-  Page hold

DIRECT SETUP (Code Input)

Make sure you have turned on your equipment, like TV or DVD, and locate the corresponding 3 digit code of your devices in the Code List section from the later part of this instruction manual.

1. Press and Hold the “SET” key for 3 seconds to enter the remote set up menu
2. Watch the LCD display and see “CODE SETUP”, press “OK”
3. Press v/^ key until you see “DEV SETUP”, then press “OK”
4. Select a desired Device Mode (e.g. “TV”, if you want to set up your URC to operate your TV), then press “OK”
5. Use the number keys “0” – “9” to enter the 3-digit device code of your brand
6. Press “OK” on the URC to lock the code. The LCD display will show “SUCCESS” when the URC has locked the code

(Try the function keys on the URC. If your device (e.g. TV) responds to your invoked function correctly, you have input a right Device Code. Otherwise, repeat the above set up instructions with the rest available Device Codes in the code list until your device (e.g. TV) responds to your invoked function, and most keys work correctly)

** Simply repeat the above procedures to find the codes for your VCR, SAT, CTV, STB, DVD or AUX. (Remember to press a correct Device Mode Key in Step 4 above.)

Remarks:

 
If the entered code is not correct, the LCD indicator will show “NOT FOUND”. You have to enter the correct 3-digit code again

SET UP BY AUTO SEARCH

Make sure you have turned on your equipment, like TV or DVD

1. Press and Hold the “SET” key for 3 seconds to enter the remote set up menu
2. Watch the LCD display and see “CODE SETUP”, press “OK”
3. You will see “DEV SEARCH”, then press “OK”
4. Select a desired Device Mode (e.g. TV, if you want to set up your URC to operate your TV)
5. Then, press “OK” and now point your URC at your device (e.g. TV)
6. Your URC will send out the POWER code one by one automatically (the corresponding device mode key will flash), wait patiently until your device (e.g. TV) is turned off
7. Press “OK” on the URC to lock the code. The LCD display will show “SUCCESS” when the URC has locked the code

(Turn on your device (e.g. TV) again, try the function keys on the URC. If your device (e.g. TV) responds to your invoked function correctly, your URC has located a right Device Code. Otherwise, repeat the above set up instructions with the rest available Device Codes until your device (e.g. TV) responds to your invoked function, and most keys work correctly)

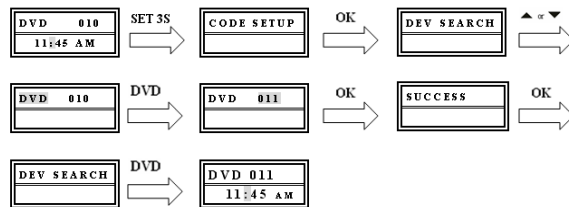

** Simply repeat the above procedures to search the Device Codes for your VCR, SAT, CTV, STB, DVD or AMP. (Remember to press a correct Device Mode Key in Step 3 above.)

IMPORTANT:

-The URC will stop the code search when it searched all its installed codes

 
-Press “EXIT” to return the URC back to normal stage

-If no installed codes match your devices, see HOW TO SET UP THE URC – By Learning section

By Learning (Command Capture from Original Remote)

If the above 2 set up method cannot help, you can try to set up the URC by Learning. Your URC can learn and reproduce up to 80 commands from other remote controls. All function keys of the 8 Device Modes (TV, DVD, VCR, CD etc) can be taught to operate additional commands, except “FAV”, “MACRO” and “ALL OFF”.

1. Get your A/V original remote ready (e.g. TV remote)
2. Press a desired Device Mode of your URC (e.g. “TV”, if you want to set up your URC to operate your TV)
3. Press and Hold the “LEARN” key for 3 seconds until the LCD shows “LEARN KEY”
4. Press “OK”, and you will see “SELECT KEY”
5. Aim your A/V original remote control to the URC Infra red lens on a flat surface, with 5-8 cm apart. Make sure your A/V remote control is with fresh batteries
6. Press and release a desired key on your URC you want to hold the command
7. Press and hold the corresponding key on your A/V remote to transfer the command. The LCD of your URC will show “SUCCESS” when the command has been learnt successfully, you can release the key on the A/V remote control. If the LCD of your URC shows “FAILED”, it tells error in the learning process. Adjust the position of both remote controls and repeat step 7 again
8. Repeat steps 5 to 7 to transfer other commands into next function key. When you finish the whole device mode, press the same device mode key (e.g. TV) again to store your setting.

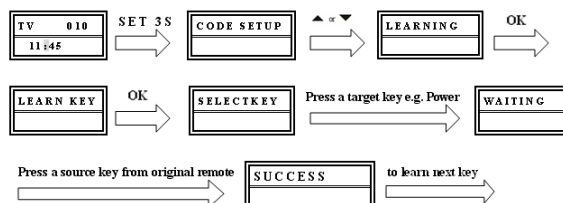


Other Set Up

A. Set up Clock

You can set up the clock on your BW-LCD universal remote control and the clock will be displayed on the screen.

 
1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the **▲** or **▼** key to select the “CONFIGURE” menu, and then press the OK key.
3. Press the **▲** or **▼** key to select the “TIME SETUP” menu, and then press the OK key.
4. Press the **◀** or **▶** key to move the cursor to select hour or minute or AM/PM, then press the number key to set hour and minute, and press the **▲** or **▼** key to select AM or PM.
5. Press the **OK** key to save the setting and LCD display SUCCESS for 1 second then exit to current setup state, if you enter errors the LCD screen shows ERROR for 1 second. You can press any device key to finish set up or press EXIT key return to the last state.

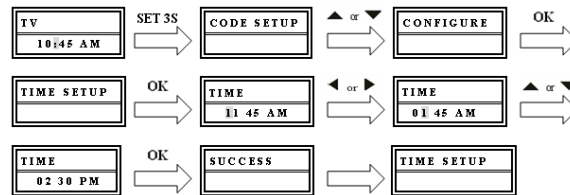

B. Volume Lock

This function makes you very convenient when you only use one device to adjust volume. For example, you may use your amplifier as your main volume control, then you can use this function to fix the volume and mute key of AUX, no matter which device you will use (even you will use TV, DVD, and VCR etc), the volume and mute key on remote control still control the volume and mute of your amplifier.

 1. Press and hold the SET key for more than 3 seconds, and then release it.
2. Press the ▲ or ▼ key to select the “CONFIGURE” menu, and then press the OK key.
3. Press the ▲ or ▼ key to select the “VOL LOCK” menu, and then press the OK key.
4. Press the device key to select the device you want to fix, such as AUX.
5. Press the ◀ or ▶ key to change to the “ON” or “OFF” mode. (*ON is locked the device, OFF is unlock the device*) mode.
6. Press the OK key to save the setting and LCD display SUCCESS then to current setup state, You can press any device key to finish set up or press the EXIT key to last state, or you can use ▲ or ▼ to select other set up.

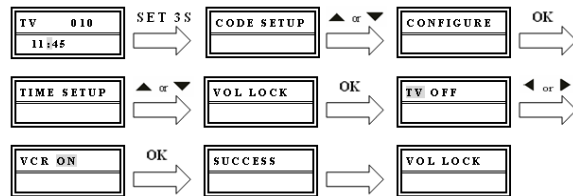

Remark:

You can only lock one device for volume and mute of your new remote control. The locked device will be unlocked when you lock on the other device automatically.

C. Device Lock

 
You can use Device lock function to fix current device code and this device code cannot be changed by brand and code set up or auto search. You can set it to the “OFF” to quit from this function.

1. Press and hold the “SET” key for more than 3 seconds, and then release it.
2. Press the ▲ or ▼ key to select the “CONFIGURE”, then press the OK key.
3. Press the ▲ or ▼ key to select the “DEV LOCK”, and then press the OK key.
4. Press the device key to select the device that you want to fix, such as TV (or DVD, or SAT....)

Press the ◀ or ▶ key to change to the “ON” or “OFF” mode.

(ON is to lock the device, OFF is unlock the device)

5. Press the OK key to save the setting and LCD display SUCCESS then exit to current setup state. You can press any device key to finish set up or press the EXIT key to last state or you can use ▲ or ▼ to select other set up.

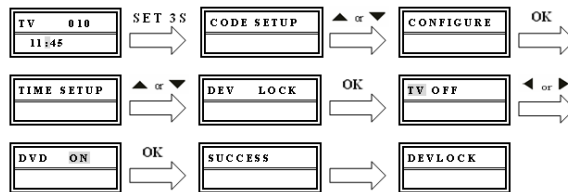

Remark:

You can fix all device codes and these device codes can be changed by neither Auto Search nor Brand Code Set up.

D. Background Light

If the background light is on, the background light will be lighted up when you press any key.

1. Press and hold the “SET” key for more than 3 seconds, and then release it.
2. Press the ▲ or ▼ key to select the “CONFIGURE” menu, and then press the OK key.
3. Press the ▲ or ▼ key to select the “LIGHT” menu, and then press the OK key.

4. Press the ◀ or ▶ key to change to the “ON” or “OFF” mode.
5. Press the OK key to save setting and LCD shows SUCCESS then exit to current setup state, You can press any device key to finish set up or press the EXIT key to last state, or you can use ▲ or ▼ to select other set up.

E. Contrast Adjust

If you are not satisfied the screen contrast of your remote control, you can use below steps to change it.

1. Press and hold the “SET” key for more than 3 seconds, and then release it.
2. Press the ▲ or ▼ key to select the “CONFIGURE”, then press the OK key.
3. Press the ▲ or ▼ key to select the “CONTRAST”, then press the OK key.
4. Press the ◀ or ▶ key to adjust contrast level, and then press the OK key when you satisfied.
5. Press the OK key to save the setting and the LCD shows SUCCESS then exit to current setup state, You can press any device key to finish set up or press the EXIT key to last state, or you can use ▲ or ▼ to select other set up.

F. ALL OFF

You can turn off all devices by one button only and sometimes it's convenient for you.

Press and hold the ALL OFF key about 1 second and then release them. The remote control will send out all current power signal to turn on (or turn off) for every device one by one. Meanwhile the device key flashes to tell you which power signal is been sending.

Remark:

 
The remote control must be pointed to device that you like to control until the operation finished.

G. Macro Function

Macro function let you make sequent operation for you home theater. Press and hold the MACRO key and 1 key (or 2, 3 key), and then release them. The device LED will flash and the remote control will send out a sequent IR commands that you programmed before.

You can set up a Macro by following below steps:

1. Press and hold the “SET” key for more than 3 seconds, and then release it.
2. Press the ▲ or ▼ key to select “MACRO”, and then press the OK key.
3. Press the▲or▼ key to select the “MACRO1” (or Macro2 or Macro3), then press the OK key.
4. The screen shows “SETUP”, and then press the OK key.
5. You can select the device and function key for a sequent operation that you like. (e.g.: TV+POWER+MUTE+AV, DVD+PLAY, VCR+RECORD, etc. That means you want turn on the TV and shut off its sound, switch TV input to AV port, at the same time DVD start to play disc, VCR begins to record)
6. Press the OK key to save the setting, LCD shows SUCCESS then exit to current setup state,
7. You can press any device key to finish set up or press the EXIT key to last state and use ▲ or ▼ to select other set up.

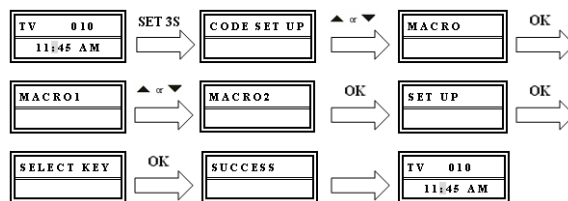

Remark:

 
1. You can set up to maximum 10 commands in a MACRO.
2. Be sure all the keys can send out signals, otherwise even if you programmed these keys inside the MACRO, it still can not work properly when you operate MACRO function. You can check those keys by pressing them to see the relative Device buttons flash or not before you set up MACRO.
3. Be sure the device must have relative conditions when you

operate MACRO function. For example the disc must be put in the DVD player and a video tape must be put in the VCR when you like to play the DVD or make a record by your VCR.

4. Press and hold the MACRO key then press 1(or2, 3) key, and then release press it. When the device's LED is flash, it transmits the sequence command which you set up.

H. Delete Macro

1. Press and hold the "SET" key for more than 3 seconds, and then release it.
2. Press the ▲ or ▼ key to select the "MACRO", and then press the OK key.
3. Press the ▲ or ▼ key to select the "MACRO2", then press the OK key. LCD shows "SET UP"
4. Press the ▲ or ▼ key to select the "DELETE", and then press the OK key.
5. LCD shows "SURE DELETE ", Press the OK key to confirm the delete and LCD display SUCCESS then back to last state,
6. You can press any device key to finish the delete operation or press the EXIT key to last state and use ▲ or ▼ to select other set up.

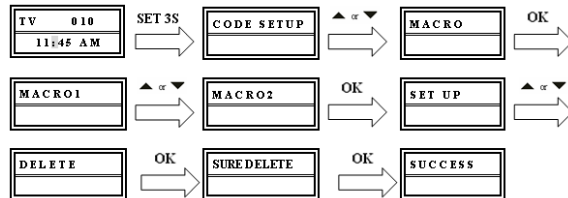


I. Device Alternation

If you want operate second VCR (or second TV, SAT/CBL, CD, DVD, TAPE, TUNER etc.), you can set up its code to A UX device key for a device alteration (CODE SHIFT). Just follow the steps below:

1. Press and hold the SET key on your new remote control for more than 3 seconds. Then release it. Press the ▲ or ▼ keys to select to "CODE SETUP", and press the OK key.

- The screen shows the “DEV SEARCH” in the LCD menu, Press the ▲ or ▼ keys to select to “CODE SHIFT” , and press the OK key, then you press device key to select your desired operation device and then enter the code number
- Please press the OK key to save it and exit, LCD shows “SUCCESS”.
- Now you can operate second VCR device by AUX device key.

 Remark: Please note all devices only can be shifted and preserved in “AUX” device key. For example, if you want operate second TV, you only can shift it in “AUX” key, if you shift it in “VCR” (or SAT/CBL, CD, DVD, TAPE, TUNER etc.), it is invalid

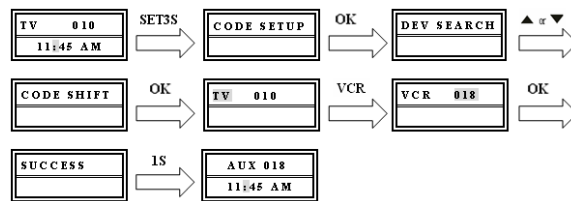


J、Favorite channel setup

- Select the device you want to program for Favorite Channel setup (For example, TV)
- Press and hold SET key, then press FAV key .When LCD displays “FAV01 000”, release all keys, and the last digit “0”is flickering
- Enter channel number (for example, 128), The LCD also displays the channel number

Note: when your device requires ENTER to select channel, please press ENTER, meanwhile, the LCD displays it.
- After setup the first favorite channel, press FAV to confirm .After the LCD indicates “SUCCESS”, the LCD displays “FAV02 000”, then you can set up the second Favorite Channel.
- Repeat step 3 to set up all favorite channels .In all, you can set up 15 favorite channels.
- After setup all favorite channels, press “OK” to save. When the LCD displays “TOTAL ***”, then return to previous menu in 0.5 second.

Remark:

 1. *** means the quantity of favorite channels you setup.
2. During the period of setup, you can press “EXIT” to previous menu, but can not save the setup result.
3. Max has 15 favorite channels. When you set up 16th favorite channel, press FAV key to confirm the LCD indicates “OVER” and automatically exit, meanwhile save the original 15th favorite channel.
4. When enter channel number, if you don’t press any digit and ENTER key, press FAV key directly, the LCD will display “CUR FAIL” and exit to the state of enter channel number; if press OK key directly ,the LCD will display “NO KEY” and exit favorite channel setup.
5. Whenever you want to add or replace one or more favorite channels, all previously entered favorite channels are cleared.

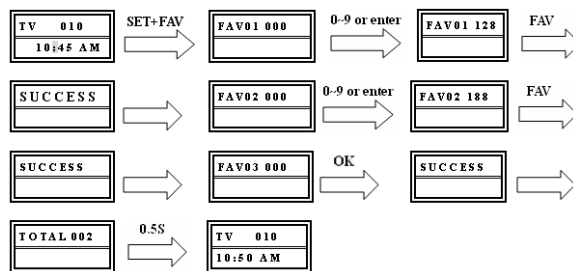


Favorite channel scan

1. Select the device you has already programmed with Favorite Channel (for example :TV)
2. Press and hold FAV key for 1.5 seconds. Once the LCD displays “01--CH ”,release the key,2 seconds later, the LCD will scroll the favorite channels ,

For example: if you already setup channel 128 as favorite channel, then the LCD will display “**--CH 128”.Press any key to exit in midway


Remark:

 1. ** means the sequence of current favorite channel
2. After scan all favorite channels, will exit scanning automatically

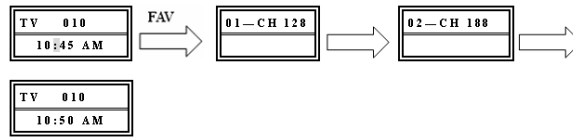


K、 SLEEP TIMER

 1. Select the device you want to program for sleep timer ((For example, TV)
2. Press and hold SET key for 3 seconds to enter main menu, press ▲ or ▼ key to select TIMER SET function, press OK key to enter and select “SLP TIMER” menu, press OK to enter sleep timer setup.
3. Now, the LCD displays “MINUTE 00”, and when the last digit “0” is flickering, input the sleep time you need .The time can be 0-99 minutes.
- 4.After enter the time ,press OK key and the LCD displays “SUCCESS”, then the LCD displays “OFF”, then you can press ◀ or ▶ keys to select sleep timer’s off and on .(Off means sleep timer is off, ON means sleep timer is on)
5. After select OFF or on, press OK key, the LCD displays “SUCCESS”, then exit to SLP TIMER menu.
6. After sleep timer setup, and it is “on”, when the sleep timer of remote is time out, will transmit “POWER” code of current device. It can switch to the device with sleep timer function automatically. (For example :remote current time is 12: 23 PM, sleep timer is 23 minutes, then when it is 12: 46 PM, the remote will shutdown the device.)

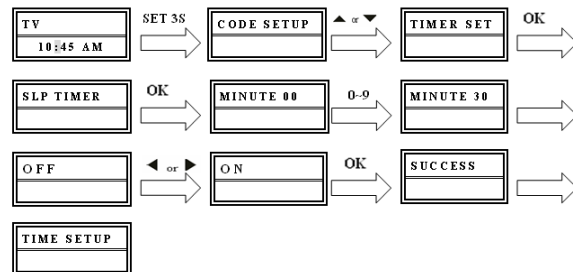

L、TIMER 1/2/3 SETUP

 1. Select device key (For example: TV)
2. Press and hold SET key for 3 seconds to enter main menu
3. Press ▲ or ▼ key to select TIMER SET function, press OK to enter
4. Press ▲ or ▼ key to select time mode: TIMER1, TIMER2 or TIMER3, then press OK to enter time setup
5. The LCD displays “INPUT TIME 11: 59 AM”, now the first digit “1” is flickering ,and wait for enter the time
6. Press digital keys to set up time, and press the ▲ or ▼ key to select AM or PM., then press OK key ,the LCD displays “SUCCESS”, then the LCD displays “OFF”, you can press LEFT and RIGHT key to select timer’s off and on .(Off means timer is off, ON means sleep timer is on).
- 7 Press OK key, the LCD displays “SUCCESS”, return to TIMER 1 menu.
8. After timer setup, and it is on ,when the remote is on preset time, will turn on or shutdown current device.(For example :remote current time is 12: 23 PM, timer setup as 12: 46 PM, then when it is 12: 46 PM, the remote will turn on or shutdown the device.)

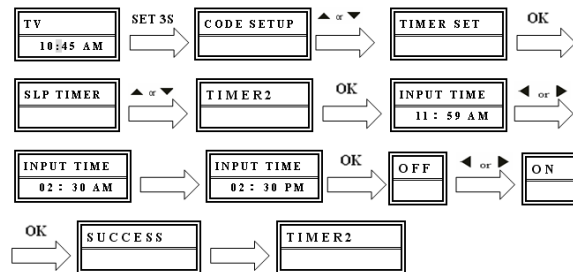

M、Keyboard Lock

1. Press and hold SET ,then press digit ”8” key, the LCD displays “LOCK KEY”, now the keyboard is locked.
2. Press and hold SET key again, then press digit “8” keys for one second, the LCD displays “UNLOCK KEY”, and release all keys, the keyboard is unlocked.
3. After locked, press any key, the LCD will display “KEY LOCKED”, and can not process any setup. Before setup, the keys should be kept unlock.

Clear All

Erase all the setting up data, and go back to the factory default settings.

1. Press and hold the SET key for more than 3 seconds, and then release it.
2. Press the ▲ or ▼ key to select the “CONFIGURE”, and then press the OK key.
3. Press the ▲ or ▼ key to select the “CLEAR ALL” , and then press the OK key and LCD shows SURE CLEAR.
4. Then press the OK key to clear all settings and go back to original default settings.

NEED HELP?

If you have questions about your remote control, just call our phone help line:

1300 766 488

or visit our web support page:

www.antennawarehouse.com.au/remotemaster

Before you call, please read the manual carefully. However, please make a note of your device in the table below and tell it to our operators when you call.

MODEL NO: BW-LCD

Date of purchase: ___/ ___/ ___/

Day month year

Device	Brand	Model number	Model number of original remote	Code
TV				
VCR				
CBL/SAT				
DVD				
CD				
TUNER				
TAPE				
AUX				

Device Brand Code List

TV

Brand	TV
Accent	023, 376,393
Acme	004,010,313
Acura	010,309
Action	376
ADA	015
ADC	002,006
Admiral	001,002,003,020,050,054,109,187,196,197, 234,308,376,408,426,454,465
Adyson	004,186,210,213,296
Agashi	185,187,212,214,296,377,381
Agazi	003,308
Agb	124
Agef	234
Aiko	004,005,010,023,296,309,376,382,392
Aim	023,381,391,400,416
Aiwa	088,213,318,339
Akai	007,009,010,011,012,023,052,062,069,070, 071,134,142,170,185,221,296,309,314,317, 340,376,377,378,381,382,391,392,400,401, 405,407,414,433,434,449,453,471
AKI	185, 382
Akiba	012,023,101,212
Akito	023,026
Akura	003,012,016,023,072,101,185,191,212,308, 376,393
Alba	309,317,326, 378
Albe	004,010,012,023,028,029,054,063,069,087, 163,170,184,185,187,195,198,215,217,296
Albiral	038,185,207,377,378,381,393,415,416,417, 418,468,469,470
Alcyon	209
Alkos	165
Alhori	382
Allorgan	021,027,195,212,219,382
Allstar	023,052
Amplivision	004,198,207,214,228, 382,416
Amstrad	003,010,012,014,023,031,069,070,072,075, 109,124,226,308,309,317,341, 376,393,454
Anam	010,066,110,309
Anglo	010,309, 393
Anitech	003,010,016,023,044,110,183,184,209,224, 231,308,309,376,377,380,381
Ansonic	010,015,023,198,275,309
Antecno	392
Arcam	296
Arcam delta	004
Arcelik	377,378,387,388,399,451,456
Arc en ciel	046,127,140,204,207
Ardem	451
Aristona	016,023,052,170,195
A.R.Systems	023,377,415,416
Arthur Martin	159
Art-tech	212, 377
ASA	001,017,018,019,050,111,234,407,438,440, 441,442,465
Asberg	023,044,052,182,187,195,209, 377,380,381,401
Astra	010,309,376, 377
Astro sound	207,212, 377,378,416
Asuka	003,004,012,101,212,214,218,296,308,378, 392
Ataki	411

Atlantic	004,021,022,023,052,170,182,197,296,377
Atori	010,309
Atoro	376
Audiosonic	004,010,012,021,023,052,140,170,198,309, 376,377,382,392,393,399,415,419,451
Audio Star	392,411
Audioton	004,182,198,231,233,376,382,392,411
Aurora	376,382,400,426
Ausind	044,209,212
Autovox	001,003,004,021,044,058,102,126,209,234, 308,376,377,382,396,400,453
AWA	023,296,376,377,381,382,400,446,453
Baird	140,185,186,200,232,409, 453
Bang&olufsen	001,234, 377,381,426
Barco	409,417,418,426
Barcom	210
Basic line	010,012,023,052,101,184,186,212,309, 377,389,392,395,396
Bastide	004
Baur	023,077,119,133,142,170,376,377,381,385, 386,395,396,404,405,410,433,437,444
Bazin	183,185,201,217,382,403
BBK	474,475,476,477,486,487,488
Beijin	263
Beknteknik	228
Beko	008,023,035,084,198,214,228,311,342, 377,378,387,388,399,403,451,456,471
Beon	023,052,170, 401
Best	114,115,198
Bestar	023,052,116,198,228,321
Bifonic	376,382
Bigston	376,393,400
Binatone	004
Black diamond	326
Black star	130
Blacktron	101,212
Blackway	101,212
Blaupunkt	009,113,120,136,179,385,386,415,433,446
Blausonic	207, 382
Blue sky	012,023,101,212,228,377
Blue Star	101,121,378
Bondstec	130
Boots	004,026
Boston	208,218
BPL	023,096,101,121
Brandt	037,046,047,127,128,140,204
Brendstar	376
Brinkmann	023
Brion vega	001,023,052,058,170,208,234,343,377,391, 408,426,454
Bristol	208
Britannia	004,296,377,382,406
Bruns	001,008,040,227,234,405,426,427,469,470
BSR	027,132,197,210,212,215,403
BTC	012
Bush	010,012,020,023,025,026,028,029,033,052, 063,069,101,116,121,132,133,140,168,170, 172,309,317,320,321,326,378,404,411
California	195
Capsonic	003,214,308,377,393
Carad	023
Carena	023,212,214
Carrefour	028
Cascade	010,023,309
Casio	023,201,377
Cathay	023,052,170
CBM	380
CCE	023

Centrum	325,326
Centurion	023,052,170
Century	001,191,234,426,468
CGE	044,054,130,132,187,198,204,209,376, 377,378,380,381,392,399,401,403,468
CGM	226,233,376,377,393,399,411,451
Changhong	241,242,245,246,247,248,264,278,279,288
CIE	196,212,226, 376,392,400
Cihan	214, 377,378,381,403
Cimline	010,029,212,213,309
City	010,309
Clarivox	038,040,170, 377,381,415,416,419,424,425,426,427,468
Clatronic	003,004,010,012,023,031,044,052,084,130, 185,198,209,212,214,308,309
Cofadel	204
Colombia	228
Colombus	182
Computron	376,377,381
Concorde	010,309, 376
Condor	004,022,023,052,084,101,182,184,187,198, 211,296,376,377,380,381,393,401,469,470
Conrowa	265
Contec	004,010,028,030,031,211,212,217,296,309, 376, 382,393,446
Cont.ediso	204
Conti	377,381
Continental edison	037,046,047,112,127,140
Cosmel	010,309, 376,419
Cosmos/Tokai	376,377
Crezar	182,226
Crosley	001,044,130,132,209,234,380,397,426,468
Crown/ Onwsaky	010,023,044,052,054,084,096,115,122,170, 198,209,228,309,371, 376,377,380,392,393,399,401,411,434,451
Crystal	377
Cs electronics	004,012,130,296, 392
CTC	130
Ctc Clatronic.	015,187,198,207,210,212,226,377,380,382, 392,393, 399,401,468,469,470
Curtis	381
Cybercom	308,309,310,311,312,313,314,315,316,317, 318,319,320,321,322,323,324,325,326,327, 328,329,330,331,332,333,334,335,336,337, 338
Cybermaxx	308,309,310,311,312,313,314,315,316,317, 318,319,320,321,322,323,324,325,326,327, 328,329,330,331,332,333,334,335,336,337, 338
Cybertron	012
Cymatic	378,382,415
Cytron	308,309,310,311,312,313,314,315,316,317, 318,319,320,321,322,323,324,325,326,327, 328,329,330,331,332,333,334,335,336,337, 338
Daewoo	004,010,023,052,059,095,116,196,296,309, 321,345,376,377,381,382,391,392,400,453, 468
Dainichi	012,212,296
Dansai	003,023,052,170,212,296,308,393
Dantax	035,149,162,198,213,326
Datronic	196,211
Datsura	096,122
Dawa	023,195, 377,381
Dayton	010,309
Daytron	023,196
Deawoo	023

Decca	004,011,023,026,031,052,124,170,377,381,382,415,453,466
Decca(uk)	229
De Graaf	007,020,034, 404
Deitron	023
Denko	185,214
Denver	211,212,376, 377
Desmet	023,052,170,182,376, 377,378,381,415
Diamant	023
Diamond	376,400
Digiline	023,213
Digital	212
Dixi	010,023,040,052,170,309, 376
Domeos	377
Domland	219
Domoh	182,377
Doric	397
Drean	023
DTS	010,309
Dual	004,023,090,126,127,132,140,161,185,195,197,207,211,219,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,332,333,334,335,338,376,377,378,381,382,395,396,405,437,440,454,459,468
Dual-Tec	004,010,132,197,309
Dumont	001,004,015,018,019,234,377,380,381,401,426,438,440,441,442,469,470
Dux	023,170,195
Dynamic	376
Dynisty	377,400
Dynatron	023,052,170
Edan Line	377,409
Elbe	023,038,109,158,180,198,275,378,382,397,408,415,416,446,454
Elcit	001,234
Electa	121
Electro Tech	010,309,376
Elekta	101
Elektronska	207,378, 415
ELG	023
Elin	004,017,019,023,052,170,181,186,197,233,296,376, 377,381,382,405,407,440
Elite	012,022,023,052,179,184,197
Elman	015,132,207,213,378, 469,470
Elsay	184,229
Elta	010,296,309
Emerson	001,023,101,128,142,234,377,378,380,381,382,393,426,441,468,469,470
Emperor	101
Engel	207,227,378, 427
Erres	016,023,052,170
ESC	023
Estel	207
Etron	010,023,309,376,434
Eurocom	207,212, 378
Euro-Feel	003,308
Euroline	089,170
Euroman	023,185,196,198,212,214,296, 377,381,382
Euromann	003,004,052,115,308
Europa	023,228
Europhon	004,015,023,026,052,073,124,132,207,226,378,382,415,468,469,470
Eurotronic	228
Expert	021,186,188,197,395,450
Exquisit	023
Fagor	378,379
Falcon	376

Fenner	010,116,184,191,195,212,309,321,376,377,381,400
Ferguson	036,037,038,051,053,082,112,128,164,170,232
Fidelis	182,211,376,377,381,382
Fidelity	004,020,023,069,097,296,317,378,382,388,392,395,396,406,421,434,467,468
Filsai	217,376,382
Finlandia	007,020,111,129,181,186,200, 403,404
Finlux	001,004,011,015,017,018,019,023,044,052,064,111,124,132,158,168,170,181,209,225,234,314,315,376,397,401,407,413,414,415,438,440,441,442,453,469,470
First Line	004,010,023,027,052,063,130,183,296,309,376,377,381,382,395,396,468
Fisher	001,004,007,019,028,030,040,041,084,132,195,198,200,211,227,234,382,395,396,397,426,427,440,446,447
Flint	023,052,149,183,184,187,196,214, 377
Formenti	001,002,004,022,044,126,132,134,170,182,209,234,296,376,377,378,380,381,382,393,397,399,401,403,415,426,469,470
Fortress	001,002,234,426
Fraba	023,198
France Concept	184
Friac	023
Frontech	003,010,020,050,069,119,130,183,184,191,213,308,309,317, 376,404
Fujitec	377
Fujitsu	011,021,197,207,212,392,442,454
Funai	003,027,211,212,308,346,376,393,446
Galactex	382,393
Galaxi	023,054,084
Galaxis	023,198, 377
Galaxy	380,382,399,401,433,438
Galeria	196,376
Galway	184
GBC	010,028,132,226,233,309,376,377,378,381,392,397,400,411,434,446,453,465,468
GCM	195,212
GE	388
Geber	389,395,396
GEC	004,011,023,042,050,052,124,133,142,170,382,395,397,403,404,415,446,453
GEC(UK)	186,224,229,231
Geleso	376,378,392,397,400,415,468,465
Geloso	010,020,132,231,309
General Technic	010,309,376
Genexxa	012,023,050,052,212
Germanvox	226
Giant	377,381,382,383,384
Gitem	377,381,385,386,387,388,389,390
GM	376,377, 393
GMG	376,377, 393,401
Goldhand	231,296
Goldstar	004,010,013,020,023,052,085,094,130,132,170,172,198,206,210,223,296,309,326,344,376,378,377,381,382,404
Goodmans	003,010,011,023,028,029,052,069,094,112,116,128,154,170,206,230,308,309,317,321,326,376,377,378,381,400
Gorenje	084,115,198,377,395,396,399
GPM	012,210,212,376,392
Gradiente	023
Graetz	050,142,143,188

Granada	004,007,011,020,023,028,032,041,044,052,055,065,124,128,129,134,135,139,170,209,377,381,382,383,384,397,403,404,406,415,417,420,424,429,446,456,457
Grandin	010,012,023,101,121,170,184,309,378,395,450
Great Wall	393,419
Gronic	180,191,212, 377,378,381,382
Grundig	009,018,023,044,092,102,117,118,136,137,185,209,347,377,381,385,386,391,424,433,479
GTT	187,211,401
H-150a	276
Haaz	338
Halifax	003,004,296,308
Hamerstein	382,393,448
Hampton	004,183,226,296,382
Hanimex	392
Hanseatic	004,008,010,022,023,027,028,052,074,096,101,119,132,142,170,198,234,275,309,376,377,382,385,386,395,396,397,404,405,415,437,446
Hantarex	010,023,124,309,376,377,415
Hantor	023
Harwood	023,186,326
Hauppauge	023
HCM	003,004,010,023,075,101,121,200,211,226,308,309,376,378,382,411
Hemmermann	183,201, 382,395,396
Hexa	378,425
Hifivox	140,204
Higashi	185,382
Highline	023
Hiline	376,393,434
Hinari	007,010,012,023,028,044,052,138,170,200,212,213,227,230,309,326,376,377
Hisawa	012,101,121,149,212
Hisense	404,409
Hit	234
Hitachi	004,011,017,020,023,024,028,034,042,045,046,047,048,049,050,086,119,124,132,133,139,140,141,142,143,145,186,224,257,258,280,313,348,378,382,391,395,396,397,403,404,407,414,446,449,461,464
Hitsu	185,212
Horizont	306,307
Hornyphon	023,052
Hoshai	012,212,233,411
Huanyu	004,116,296,321
Hunter	432
Hygashi	004,296
Hyper	004,010,130,132,226,233,296,309,376,377,378,382,392,403,411,434,461
Hypson	003,004,023,052,101,121,170,212,214,308,376,377,381,393
Iberia	023
Ibervisao	188,207,378,395,396
Ibico	196
ICE	003,004,010,012,023,052,069,187,210,212,296,308,309,317, 392,393,434
ICES	296
IEG	382
Imper	376,377,381,391,392,393,394
Imperial	023,044,050,052,054,084,130,132,187,198,209,377,380,381,393,399,401,403,468,378
Indesit	025,102
Indiana	023,052,170
Inf.Rem.Contr	413
Ingelen	050,188

Ingersol	010,309
Inno Hit	004,010,011,012,023,052,094,124,170,206,209,211,222,309,376,377,381,382,392,397,411,415,434,453,468
Innovation	003,010,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,314,316,317,318,319,320,321,322,324,325,326,327,328,329
Interbuy	010,110,130,309
Interdiscount	377,387,388,444,449
Interfunk	001,016,023,050,052,130,140,142,170,198,234,376,377,381,382,387,392,395,396,397,401,405,415,417,434,437,453,468
Internal	023
Intersound	182
Intervision	003,004,015,023,101,110,198,308,377,378,382,468,469,470
Irradio	010,012,023,052,069,170,206,209,212,309,317,376,377,378,381,392,393,424,434
Iskra	183,231,378,382,415,451,469,470
Isukai	012,023,101,212
ITC	004,132,184,204,233,378,382
ITE	207
ITL	196,376
ITS	012,023,052,069,101,121,212,296,317
ITT	010,050,062,133,134,135,142,143,144,188,220,309,314,349,376,377,378,381,389,392,395,396,397,399,400,401,402,403,404,405,406,407,408,409,410,411,412,413,414
Itt Schaub Lorenz	376,377,378,395,396,397,398
ITV	023,309,326
JEC	165
Jet Point	199,377,448
Jinlipu	376
Johnson	382
JVC	028,052,069,082,189,317,350,421,434,446,448,463
Kaiser	377
Kaisui	004,010,012,023,121,212,296,309,376,377,382,392,401,411
Kambrook	377,382,393,449
Kamosonic	004,382
Kamp	004,296
Kapsch	021,050,188,197,200,397,440
Karcher	004,010,017,023,038,101,170,198,309,376,377,381,382,399,404,411,416,442
Kasai	212
Kauasonic	432
Kendo	015,020,023,029,109,180,183,186,196,197,198,207,213,376,397,382,408,454,465,468,469,470
Kennedy	021,132,182,197,231,387,397,454,468
Kennex	182,226,233
Kerion	182,212,377,381
KIC	382
Kingsley	004,296
Kiota	393
Kitt	212,382,393
Kiyogin	377
Klarmax	378,382,415,416,417,418
Kneissel	023,175,180,182,196,198,212,275
Kobic	376
Koenig	397
Koerting	377,395,396,426
Kolster	023,052,191,210,214,377,378,381,382,416,468,469,470
Konka	012,023,185,238,242,243,244,248,249,254,255,260,261,285,287,289,303,313,373

Kontakt	204
Korpel	023,052,170
Korting	001,022,198,234
Kosmos	023
Kotron	226,393
Koyoda	010,309
Kronne	180,378,382
KTV	004,210
Kuba	186,195
Kuro	096,122,200
Kyoto	038,217,378,382,415
Lavis	211,415
Leader	376
Legend	376,377,381,382,393,419
Lenco	010,023,226,233,309,400,405,469,470
Lenoir	004,010,196,199,208,211,309,376,377,381, 382,395,396,400,411
Lesa	130,191
Leyco	003,011,023,027,052,170,214,308, 377,393,453
LG	004,010,013,020,023,052,085,089,094,130, 132,150,170,172,198,206,210,223,296,309, 326
Liesenk	170
Liesenkotter	023,179,195,377
Life	003,010,062,068,069,088,104,108,112,116, 155,157,169,172,176,177,178,308,309,314, 316,317,318,319,320,321,322,324,325,326, 327,328,329,376
Lifetec	003,010,023,062,068,069,088,104,108,112, 116,155,157,169,172,176,177,178,211,214, 308,309,310,311,312,313,314,315,316,317, 318,319,320,321,322,323,324,325,326,327, 328,329,330,331,332,333,334,335,336,337, 338
LLOYD'S	376,382,393,397,424
Loewe	023,098,099,198,234,275,351,395
Loewe Opta	001,052,170,190,377,382,415,437,440
Logik	031,421,443
Luma	020,021,023,052,142,170,186,197,454,465
Lumatron	020,021,023,052,142,170,308
Lux May	023,052
Luxor	004,020,048,078,094,102,133,139,142,147, 206,313,382,390,397,403,404,405,407,409, 422
Maaz	417,418
Macth-Italia	377
Madison	023,182,212
Magnadyne	001,015,124,130,132,170,191,234,376,377, 378,381,395,396,397,401,415,426,433,465, 468,469,470
Magnafon	004,015,044,073,124,181,182,183,195,207, 209,296
Magnavox	023
Magnex	377
Magnfon	377,397,382,415,438,469,470
Magnum	003,010,062,068,069,088,104,108,112,116, 155,157,169,172,176,177,178,308,309,314, 316,317,318,319,320,321,322,324,325,326, 327,328,329,480,481,482,484
Mandor	003,308
Manesth	003,004,022,023,029,052,170,182,184,188, 213,308, 377,389
Manhattan	023
Marantz	023,052,170,187,195, 377,381
Marech	182
Marelli	001,234
Mark	023,052,170,296,451
Marshall	212

Mascot	468
Matsui	004,005,010,011,014,020,023,026,027,028,029,031,052,063,069,092,124,148,149,165,170,174,213,215,309,317,376,377,378,382,393,395,396,397,404,455
Matsuka	382,393
Matsushita	066
Maxam	376,382,393
Maxell	376
Maxwell	377,415,418,417,469,470
MCE	376
McMichael	042
Mediascreen	214
Mediator	016,023,052,170,195
Medion	003,010,023,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,211,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
MEGA	377,391
M-Electronic	004,010,017,019,037,050,052,069,110,111,116,140,170,309,317,321,376,377,378,381,395,396,397,400,401,407,415,426,438,440,441,442,465,468,469,470
Melectronic	023,296
Memorex	010,309
Memphis	010,011,114,309, 419
Mercury	023, 376,382,393,420
Metz	001,076,081,136,152,153,218,234,385,386,433
MGA	392,393,400,437
Micromaxx	003,010,023,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Micron	382
Microstar	003,010,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Minerva	018,102,136,185,209,385,386,424,433
Minoka	023,052
Mitsubishi	001,023,028,031,052,055,056,061,099,102,136,171,192,234,276,278,279,280,326,352,376,383,384,400,433,437,446
Mivar	004,044,074,094,124,193,198,206,209,275,290,291,292,293,294,295,374,375,382,415
Morgans	023
Motion	044,209
MTC	133,198,378,399
Multi System	170
Multitec	023
Multitech	004,010,015,020,023,028,044,046,130,132,170,198,207,212,233,296,309,376,377,378,382,392,415,437,446,468,469,470
Murphy	004,019,134,296,397
NAD	142
Nagota	403
Nagoya	207
Naiko	023
Nakashi	377
Nakimura	023
Namsunc	376
Naonis	020,109
Narita	400
National	065,102,194,284
NEC	023,028,057,331,376,400,416,446

Neckermann	001,004,009,020,023,052,084,119,133,170,198,377,381,382,385,386,391,399,403,404,444,465
Necstar	432
NEI	023,052,069,114,170,183,199,212,317,377,378,381,419
Nesco	130
Neufunk	023
Newmar	182,183,207,378,382
Newtech	010,023,052,309,377,382
New World	012
Nicamagic	004,296
Nikkai	003,004,011,012,023,052,114,165,170,186,205,211,212,296,308,382,393
Nikkei	226,233,377
Nikko	419
Noblex	023,184,199,200,376,400,446,447
Nobliko	004,015,018,044,209,296,380,382,424,438,468,469,470
Nogamatic	140,204
Nokia	050,062,064,133,134,135,142,143,144,188,220,314,315,353,376,377,378,381,389,392,395,396,397,399,400,401,402,403,404,405,406,407,408,409,410,411,412,413,414
Nordic	212,213
Nordmende	023,025,037,046,047,050,052,058,112,127,128,140,204,354,467,387,449,388,397
Nordvision	170
Nordway	217
Nortek	233
Nortex	377
Novatronic	023,183,187,212,226,376,377,393,400
Oceanic	050,142,143,389,390,395,397,402,403,404,405,407,409,414,450
Oceanic(F)	188,220
Octal	382
Octan	195
O.General	376,446
Okano	023,084,187,198,233,399
Olympic	376
Onceas	004,196,211,376,382,468
Onida	381
Onwa	070,196,212,393,401,434
Opera	023
Orava Slov	377,378,426
Orava/OTF	376,377
Orbit	023,052
Orient	376,377
Orion	010,014,022,023,027,029,031,052,063,076,100,124,143,148,160,170,172,213,309,326,355,376,377,391,393,395,396,402,403
Orion Hungary	377,381,402,403,421,422,423
Orline	023
Ormond	172,326,377,415
OR-ON	411
Orsowe	207,377,381,393,415
Osaki	003,004,005,011,012,023,075,166,308,377,381,393
Osio	023
OSO	012
Osume	011,030
Other Line	415
Otto Versand	002,004,009,022,023,028,052,077,112,119,121,122,132,133,140,142,170,376,437,377,381,382,385,386,388,391,396,397,404,405,433,444,446,451
Pael	004,181,185,296,382,424
Palladium	004,013,023,084,198,399

Palsonic	023,377,381,382,392,393
Panama	003,004,010,023,166,296,308,309, 377,381,393,468
Panashiba	376
Panasonic	023,050,065,066,067,068,102,125,142,143, 152,153,194,266,286,316,356,385,386,397
Panavision	023
Panavox	376,377,397
Panavsion	393
Panda	267
Panorama	376,382,392
Panoramic	387
Pathe Cinema	004,022,038,074,132,182,207,211,228,275, 296,378,382,399,415,416,425
Pathe Marconi	038,046,047,127,140,204
Pausa	010,309,376
PCM	211,377,381
Perdio	005,011,022,023,182,207,213
Perfekt	023
Pershin	424,425
Philharmonic	185,382
Philco	001,023,044,054,130,132,187,198,209,234, 376,377,378,380,381,395,396,397,399,401, 403,416,426,446,468
Philharmonic	004,166
Philips	001,004,016,023,039,042,044,052,089,090, 112,116,132,142,156,170,195,219,234,321, 323,357,377,381,382,385,386,391,401,416, 417,426,449,472
Phoenix	001,023,052,170,182,195,198,234,296
Phonola	001,016,023,052,170,195,219,234,296
Pioneer	037,050,052,140,146,170,198,216,358,377, 381,405,449
Pionier	198
Plantron	003,023,052,308,376,397,403,415,465,468
Polar	305
Poppy	010,211,309
Portland	377
Prandoni-Prince	020,124,142,182,197,207,209,212,397,403, 415,465,468,469,470
Precision	004,166
Premier	394,432,435
Prima	010,050,309,376,382,393
Princess	376
Prinz	048,186,195,217,230,313
PRO2	308,309,310,311,312,313,314,315,316,317, 318,319,320,321,322,323,324,325,326,327, 328,329,330,331,332,333,334,335,336,337, 338
Profex	010,044,142,309,376,380,405
Profilo	172,326,377,378,381,388,415
Profi-Tronic	023,052
Proline	011,016,023,052,063,184,213,214
Prosonic	023,043,108,162,170,172,198,296,311,320, 326
Protech	003,004,010,015,023,052,114,130,132,133, 166,170,308,309,377,381,451
Provision	023,170,326
Pye	016,023,052,069,170,195,234,317,377,381, 391,400,417
Pygmy	208
Pymi	010,309
Qual Craft	392,469,470
Quasar	130,397,469,470
Quelle	003,004,017,018,019,023,027,031,052,077, 130,132,136,142,151,170,206,308,326,377, 381,382,393,395,396,405,424,433,437,438, 440,441,442,444,447
Questa	028

Radialva	023
Radiola	016,023,039,052,170,195,377,381,391,417
Radiomarelli	001,023,124,130,191
Radionette	017,019,181,188,395,397,440,442
Radio Shack	023
Radioton	185,211,451
Radiotone	008,023,052,198
Raduga	307
Rank	018,028,397,404
RBM	018,397,404
Rc	259
RCA	032
Recor	023,377,381,393,437
Record	307
Rectiligne	023
Rediffusion	142,397,405
Redstar	023
Reflex	023
Regente	376
Revox	023,052,170,190,198
REX	003,020,021,050,109,158,197,308
RFT	001,008,040,198,227,234,275,426,451
RIZ	378
R-Line	023,052,170
Rm-d	268
Roadstar	003,010,012,023,226,233,308,309,359,376, 377,381,392,411
Rob.Elect	426,427
Robotron	001,227,234
Rowa	376,382,393
Rowsonic	382
Royal	376,381,382,392,393,401
Royal Lux	198
RTF	001
Rubin	304,306,307
Saba	001,037,046,047,050,059,112,124,127,128, 140,142,143,204,360,376,377,378,383,387, 388,389,397,400,403,415,449,467
Saccs	038
Sadec	212
Sadko	307
Sagem	101,184
Saisho	003,004,010,014,029,031,124,183,213,215, 308,309,382,392,400,416,456
Saito	207
Sakura	376
Salora	020,048,050,094,096,108,109,119,122,129, 132,133,135,139,142,186,206,313,314,320, 361,377,389,403,404,405,406,407,409,413, 414,441,465
Sambers	015,044,073,124,181,207,209,211,380,398, 415,416,424,438,469,470
Samsung	003,004,010,011,023,031,052,084,091,094, 105,106,161,166,170,173,198,199,206,296, 308,309,362,376,377,381,382,399,448,453
Sandra	004,296
Sandra Color	195,231,382,415
Sankyo	428,429
Sansui	023,052,183,196,212,376,377,409,411,434
Sanwa	188
Sanyo	004,007,011,017,019,023,028,030,031,032, 040,041,044,074,096,128,132,135,161,198, 200,244,252,275,278,296,363,376,382,397, 409,410,426,427,429,440,446,447,453,457, 458,461
SAR	377,378,382
Save	023

SBR	016,023,042,170
Schaub Lorenz	050,142,143,188,220
Schneider	004,012,023,039,052,069,072,126,130,132,140,161,170,317,329,372,376,377,381,382,378,391,392,395,396,397,403,404,417,434,454
Schneider France	195,212,219
Scott	182,377
SEG	003,004,015,023,028,040,044,089,130,132,170,296,308,326,377,378,380,381,382,468,469,470
SEI	023,201,234
SEI-synudyne	001,014,015,027,050,076,124
Seleco	020,021,028,050,109,132,158,197,364,377,378,381,388,391,408,446,454,465
Semp	471
Sencora	010,309
Senday	182
Sentra	165,205,212,420,456
Serino	184,212
Set	377,378
Sharp	002,006,028,030,060,202,243,365,420,421,446
Shivaki	195,196,377
Shiwan	212
Shorai	027,212
Shov	376,377,381,391,393,430
Show	431,432
Siam	023
Siarem	001,015,124,132,180,191,234,397,415,426,469,470
Sicatel	038,207,378,416
Sice	433
Sidec	378
Siel	380
Siemens	009,023,030,136,179,366,385,386,415,424,429,433,447
Siera	023
Sierra	016,052
Siesta	161,198
Silma	377
Silva	023,211,212,224,296,376
Silver	028,392,393
Simtel	377,392,393,411
Singer	001,015,023,130,132,180,188,191,204,211,234,338,376,377,381,382,397,415,434,426,450,468,469,470
Sinudyne	001,014,015,023,027,029,076,132,170,201,377,391,392,395,396,397,426,454,469,470
Sirel	415
Skantic	050,139,147
Skay	411
Skyworth	239,271,272,273,301,338
Slava	382
S. Lorenz	376,377,392,395,396,397,399,400,405,407,409,411
Sogera	022
Sokol	306,307
Solavox	050,093,188,395,406,407
song	251,269,283
Soniko	214,217,233
Sonitron	007,135,198,382
Sonneclair	023
Sonoko	003,004,010,023,052,101,170,211,212,214,308,309,376,377,381,382,392,393,411
Sonolor	007,050,188
Sontec	023,052,161,170,196,198,210,220,377,399

Sony	010,011,028,030,031,077,107,128,131,166, 203,237,302,309,367,444,445,446,449,460
Soundcolor	211,212,214,215
Soundmaster	226,376
Sound&Vision	012,015
Soundwave	023,052,170
Sowtech	437
Standard	004,010,012,022,023,052,166,182,183,191, 196,309, 376,382,392,468
Star	381
Starlight	170
Starline	228
Starlite	023,212,376
Starlux	196,226,376
Stenway	101,121,185,212
Stern	020,021,050,197,387,408,454,465
STM	221
Strato	023
Stvi	378,382
Sunic Line	182
Sunkai	010,023,027,063,183,211,212,213,309,377, 411
Sunny	432,434,435,436
Sunstar	023
Sunwatt	377,381
Sunwood	010,023,052,309
Superla	004,296,378,415
Supersonic	409,411,434,437
Supertec	376,377,381,392
Supertech	023,119,212,226,233,296
Supertone	185,207
Supra	010,184,214,309,376,377,400
Supreme	438
Susumu	012
Sutron	010,309
Syc Line	376
Sydney	004,166,296,415
Sysline	170
Sytong	212,296
Tadistar	401
Taisho	207,213
Talent	433
Tamashi	212
Tandberg	081,158,387,415,454
Tandy	002,004,011,012,049,050,166,403,404,450
Tashiko	004,020,028,042,057,129,166,296,382,404, 429
Tatung	004,011,023,026,052,124,166,170,229,382, 415,433,453,466
TCL	196,240,241,250,253,274,277,297,298,299, 300,478
TCM	003,010,062,068,069,088,104,108,112,116, 155,157,169,172,176,177,178,308,309,310, 311,312,313,314,315,316,317,318,319,320, 321,322,323,324,325,326,327,328,329,330, 331,332,333,334,335,336,337,338,483,485
Teac	023,376,377,381,382,437
Teak	190
TEC	004,010,049,130,132,166,309,376,377,378, 382,468
Tech Line	023
Technema	182
Technica	392
Technics	066,194
Technisat	040
Technol	376,382,393,400,437
Tecnema	022
Tedalex	376,377,378,381,382

Teinel	377,378
Teinelsa	182,207
Teknant	211,376,377
Tele+	376,377,439
Teleavia	037,046,112,127,140,204
Telechrom	392,411
Telecor	023
Telefac	376
Telefunken	023,036,037,051,052,053,079,080,102,103, 112,127,128,140,164,204,368,376,377,378, 383,387,388,400,415,443,449,462,468
Telefusion	023
Telegazi	023
Telemeister	022,023
Teleopta	226,376
Telepoint	377
Telesonic	023
Telestar	023,376,393
Teletech	010,023,089,114,130,170,309,468
Teleton	004,021,081,119,133,166,197
Televideon	022,182,296,377,381,382,397,403
Telkom	377,378
Tetra	377,378,388
Tempest	023,376,382,392
Tennessee	233
Tensai	010,012,019,022,023,027,052,184,185,207, 211,213,217,325,376,377,378,381,382,392, 400,440,442,468,469,470
Tenson	182
Tesla	180,207,416
Teslaslov	377,378,417,426
Tesmet	052
Tetran	182,197,378
Tevion	003,010,023,062,068,069,088,104,108,112, 116,155,157,169,172,176,177,178,308,309, 310,311,312,313,314,315,316,317,318,319, 320,321,322,323,324,325,326,327,328,329, 330,331,332,333,334,335,336,337,338,480
Textet	004,166
Thomson	004,023,037,046,047,051,052,053,059,102, 103,112,127,128,140,164,167,204,331,369, 387,388,417,423,424,449,467
Thorn	011,019,023,036,038,055,082,112,128,142, 165,170,232,413,456
Thorn F.	377,381,382,384,385,386,387,388,389,391, 393,395,396,397,403,405,406,409,410,413, 415,416,421,424,433,437,440,441,442,443, 444,445,446,447,448,449,450,452,453,454, 455,456,457,458,459,460,461,462,463,464, 466
Tibishi	376,382,392,393
Tobo	376
Tokai	011,023,052,183,184,210,212,226,376,377, 381,393
Tokyo	004,296,411
Tomashi	101,121,212
Tomita	382
Top Vision	210
Topvision	378
Toshiba	018,028,083,165,205,245,270,279,281,370, 437,446,455,456,471
Towada	050,132
Trans Continens	023,377,415,465
Tranasonic	023,377,381,393,401
Transtec	296
Trevi	199,226,233,376,392,411
Triad	377,381,416
Trident	166,432

Trilux	377,451
Tristar	421
Triumph	014,023,083,124,181,211,226,438
Trivision	376
Tsoshi	212
Uher	021,022,023,044,050,052,181,184,190,195, 197,198,209,403
Ultravision	416,467
Ultravox	001,004,015,023,130,132,134,182,183,186, 191,201,234,296,377,381,382,397,426,433, 437,465,468,469,470,471,472
Unic Line	023,182,183,212
Unic Radio	180,188,228,378,382,405,415
Uniden	212
United	023,089,170,326
United Satellite	228
Universum	003,017,019,023,052,084,103,111,115,123, 130,132,170,198,206,209,308,314,376,377, 378,381,382,385,386,389,393,395,396,405, 407,424,429,433,437,438,440,441,442,444, 446,447
Univox	023,038,188,191,195,207,234,377,378,381, 395,416,426,468
Uranya	182,191,211,376,377,415, 469,,470
Ufax	211,382
Vanguard	186,212,376,382,404
Veco	376,377,381
Venus	262
Vestel	023,050,052,170,183,199,319,325,326,377, 378,380,381,391,399,404,421,428,468
Vexa	010,023,170,212,231,309376,377,382,391,3 92,404,411
Viceroy	382,393
Victor	028,052,066
Videocon	381
Video Logic	185
Videologic	382,392
Videologique	004,012,296
Videomac	382,393
Videosat	130
Video System	023,052
Videotechnic	296
Videoton	184,217,377,378,382,401,402,403,404,415, 422
Vidion	196,376
Visaelect	378,380,382
Visiola	004,180,296
Vision	022,023,052,182,376,377
Visorex	097,415
Vistar	049,188,389,407
Vityaz	306,307
Vortec	023,052,170
Voxson	001,020,023,044,050,052,109,189,197,208, 209,234,426,465,469,470
Walkie	197
Waltham	004,023,038,049,139,166,217
Watson	022,023,052,170,377,381,393,397,465
Watt Radio	004,015,038,132,187,201,210,231,296
Wattradio	382,395,396,397,401,416,469,470
Wega	001,023,028,234
Wega Color	446
Wega Vision	446
Wegavox	376,401,468
Wellfund	233
Weltblick	023,052,170,182,377
Weston	132,378
Wharfedale	023

White	182
White Westinghouse	004,015,022,023,044,170,182,296,377,378,380,382,399,401,437,469
Windstar	101
Winston	376,377,411
Winternitz	376,400,461
World Tech	377
Xoceco	235,236,242,260
Xrypton	023,182
Yamishi	023,101,184,212
Yokan	023
Yoko	003,004,010,012,023,052,166,170,183,198,212,224,296,308,309,376,377,382,387,393
Yorx	012,185,196,392
Yumatu	376,377,393,401,473
Zanussi	020,021,109,197
Zirwatel	376
Zoppas	197
7el	256
Others	282

VCR

Brand	VCR
Accent	173,178
Adelsound	098
Admiral	171
Adyson	099
Agashi	172,178
Aiostay	173
Aiwa	001,002,003,004,017,100,101,102,103,104,105,106,165,166,173
Akai	003,005,006,007,008,009,019,063,102,105,113,121,145,146,172,174,175
Akiba	041,099
Akitan	107
Akura	003,013,041,099,102
Alba	004,014,015,016,017,019,041,099,101,103,104,105,107,108,109,110,111,113,165,166
Albiral	172
Allorgan	073,145,169
Allstar	114,115
Ambassador	019
Amstrad	002,022,023,099,101,108,116,117,173
Anglo	173
Anitec	174
Anitech	041,099,114
Anitsch	091
Ansonic	098
Aphel Sound	173
Aristona	115
Art Tech	174
ASA	025,026,086,106,115,173,174,177
Astra	173
Asuka	002,025,026,041,099,101,106,115,118,177,178
Atlantic	171,172,177
Audio Dyn.	176
Audiosonic	108,177,178
Audioton	019
Authentic	175
Autovox	174,177
AWA	106,108,119,120,172
Awatron	173
Baird	002,003,005,014,027,028,045,101,102,107,108,121,122,123,171,175
Bang & Olufsen	172,174,175

Basic line	004,014,019,041,099,103,108,165
Bauer-Bosch	174,180
Baur	026,032,172
Beaulieu	174
Bestar	014,019,108
Black Panther	108
Black panther line	014
Blaupunkt	026,029,030,031,032,039,071,115,125,126,127,128,129,130,167,180
Blue sky	099,103,104,105,106
Bondstec	019,099,178
Brandt	066,067,102,131,132,133,134
Brinkmann	103,104
Brion vega	033,135, 171,174,175,179
Broksonic	042
Bruns	178
Bush	004,014,015,016,017,041,052,099,101,103,104,105,107,108,109,110,113,136,165,166,178
Canon	137,180
Carena	103,115
Carrefour	138
Casio	101,173
Cathay	108
Catron	019
C. Edison	175,179
CGE	002,003,101,102,171,172,173,175
CGM	089,171
Cimline	004,041,099,103,165,178
Citizen	177
Clarivox	172,180
Clatronic	019,099
Combitech	017,105,166
Concorde	172
Condor	014,019,107,108,171,172
Conic	172
Corvus	173
Crosley	179
Crown/Onwas aky	014,019,041,099,108,114,173,178,179
Cybercom	165,166,167,168,169,170
Cybermaxx	165,166,167,168,169,170
Cytron	165,166,167,168,169,170
Daewoo	014,019,034,040,079,103,105,108,138,170,172
Dansai	041,099,107,108,178
Dantax	165
Daytron	014,108
Decca	002,003,026,101,102,104,115,142,143,172,173,174,175
De Graaf	026,035,115,122,139,140,141,147,171,173,174
Deitron	108
Dema Color	171
Denko	099
Desmet	172
Diamant	106
Domland	103
Domoh	177
Dual	003,026,101,102,108,115,165,166,167,169,170,172,173,174,175
Dumont	002,026,035,045,101,115,122,144,171,172,173,174
Dynatech	173
Edan Line	171
Edison	178
Elbe	062,108,118,171,173,176,177

Elcotech	099
Elin	021,145,172
Elsay	099
Elta	041,099,107,108,173,178
Emerson	053,099,138,171,172,173,177
ESC	014,019,108,145
Esselte	173,178
Etzuko	041,099
Eumig	171
Euroman	172
Europhon	019
Excel	171
Fair Video	177
Fenner	019,172,178
Ferguson	003,028,039,043,046,057,067,101,102,108, 123,133,134,146
Fidelis	172
Fidelity	002,099,101,116,145,173,178
Finlandia	026,035,045,101,115,122,139,140,147,171, 174
Finlux	002,003,005,026,035,045,050,061,101,115, 122,144,147,171,173,174,177,178
First Line	004,025,034,035,041,061,099,103,104,106, 108,120,136,138,147,148,165,173,177,178
Fisher	019,044,045,118,122,141,149,150,171
Flint	004,103,165
Formenti	171,172,174,177
Formenti-Pheo nix	026
Frontech	019,114
Fujitsu	002,101,173
Funai	002,101,173,178
Galaxi	101
Galaxy	002
GBC	019,041,172,178
GE	175
Geber	179
GEC	026,115,174,178,179
Geleso	178
Geloso	041
General	019,173,178,180
General Technic	004,017,038,073,104,165,166,167,169
Genexxa	122
Goldhand	041,099,178
Goldmedal	173,178
Goldstar	002,025,101,106,172,173,176,177
Goodmans	002,014,019,021,025,028,041,047,048,099, 101,103,104,106,108,115,129,136,145,151, 152,173,178
GR 15	178
Gradiente	142
Graetz	003,033,045,102,122,135,145,171,175,179
Granada	010,026,029,035,039,045,049,101,106,115, 122,127,140,141,145,147,171,172,174,175, 179,180
Grandin	002,014,019,025,041,099,101,103,106,108, 177,178,179
Gronic	172
Grundig	026,029,032,039,041,050,051,052,054,084, 104,115,127,128,129,133,153,154,155,180
Haaz	165
Hanimex	105,107
Hanseatic	025,026,103,106,108,115,172,174,176,177, 178,179
Hantarex	174,177
Harwood	099
HCM	041,052,099,114,178

Hinari	004,017,041,052,053,098,099,102,103,105,108,114,136,148,152,156,165,166,178
Hisawa	004,103,105,165
Hitachi	002,003,026,035,037,098,101,102,115,129,139,144,145,147,173,175,179
H. Kardom	176
Hmv	175
Hornyphon	115
Hyper	172,178
Hypson	004,041,099,103,105,108,165,172
Impego	019
Imperial	002,101,145,171,172,173
Ingersoll	098,103,145
Inno Hit	014,019,021,026,041,099,108,114,145,174,178,179
Innovation	004,017,038,073,165,166,167,169
Interbuy	025,106,178
Interfunk	026,045,099,115,122,172,174,179
Internal	108
International	108
Intervideo	173,177
Intervision	002,101,103,104,106,107,108,172,173,176,178
Irradio	025,041,099,106,115,171,174,177,178
ITT	003,005,033,045,055,056,102,121,122,135,141,145,157
ITT/Nokia	082,084,085,088,089,090,092,140,171,172,175,177,179
ITV	014,019,025,106,108
Jason	177
Jet Point	174
JVC	003,056,057,058,059,060,102,132,142,143,157,175
Kaiser	174
Kaisui	041,099,178
Kamar	174
Kambrook	.173,174
Karcher	026,108, 172
Kansai	173,178
Kapsch	179
Kendo	004,005,006,014,019,034,063,099,103,104,106,113,121,146,165
Kenwood	003,102,118,171,175,176
Kimari	149
K. Mart	177
Kneissel	103,104,105,106
Koerting	172,174
Kolster	172
Korpel	041,099
Kronne	176
KTV	177
Kuba	149,173,175,177
Kunya	175
Kuwa	029
Kyoto	099
Lavis	178
Lenco	014,178
Lenoir	171,172,177
Leyco	041,099,148,172,178
LG	002,025,101,106,108
Liesenkotter	174
Life	174
Lifetec	004,017,038,073,103,104,165,166,167,168,169,170
LLoyd	173
Lloyd's	173,175
Loewe	031,036,098,106,115,126,127,144,158,159,167,172

Loewe Opta	025,026,039,172,174,177,180
Logik	021,041,098,099,103,121,145
Luma	093
Lumatron	014,108
Luxon	173,178
Luxor	005,045,047,061,099,120,121,122,141,149, 151,171,179
Magnadyne	171,172,174,175,177,179
Magnasonic	045,171
Magnavox	115,129
Magnfon	179
Magnum	182
Manesth	034,041,099,103,115,138,173,178
Marantz	026,039,047,062,103,107,115,118,127,151, 160,174,177,180
Mark	019,108
Marquant	114
Marta	177
Matsui	004,017,025,053,064,098,101,103,104,105, 106,107,111,117,145,148, 156,165,166,179
Maxam	178
Maxell	178
Maximal	171
Maxwell	172
MCE	172
Mediator	026,115
Medion	004,017,038,073,103,104,105,165,166,167, 168,169,170
M. Electronic	172,173,176,177,178
Melectronic	002,101,106,118
Memorex	002,010,025,044,045,101,106,122,140,141, 149,171,173,177
Memphis	041,099,178
Metz	029,030,031,032,039,084,115,125,126,127, 128,153,158,159,161,167,180
Micormay	104
Micromaxx	004,017,038,073,103,165,166,167,168,169, 170
Microstar	004,017,038,073,165,166,167,168,169,170
Migros	002,101
Minerva	032,039,128
Minolta	175
Mitsubishi	002,026,057,061,115,119,120,143,162,172
Monexe	173
MTC	173
Multitech	002,019,026,041,099,101,114,122,172,173, 174,178
Murphy	002,101,173,179
NAD	096,122
Nakamura	173
National	029,031,126,167
NEC	003,057,062,102,106,118,122,143,175,176
Neckermann	003,026,033,053,102,115,127,135,156,171, 172,174,175,179,180
Necola	177
NEI	026,172,174
Nesco	041,099,101,105,173
Neufunk	103
Newtech	172
Nikkai	019,065,099,108,177
Nobliko	083,097
Nokia	003,005,010,021,033,045,055,102,108,113, 115,121,122,135,140,141,145,147
Nordmende	003,056,057,066,067,102,131,133,134,143, 148,157,175
Oceanic	002,003,010,101,102,115,121,122,140,141, 171,179

Okano	004,063,099,103,104,108,113,114,165,178
Omega	173
Orava/Otf	172
Orion	004,015,017,048,053,064,098,103,104,105, 107,109,110,148,152,156,165,166,172,173, 175
Orson	002,101
Osaki	002,025,041,099,101,106,172,173,177,178
Osio	177
Osume	136
Otake	109,110
Otto Versand	026,032,115,172,174,176
Pael	180
Palladium	003,025,039,041,063,098,099,102,103,106, 113,127,145,171,173,174,175,176,179,180
Palsonic	099,101,173,177
Panama	172
Panasonic	029,030,031,038,076,125,158,159,161,167, 179
Panorama	177
Pathe Cinema	064,098,120,180
Pathe Marconi	003,102
P. Cinema	180
PCM	172,177
Penney	062
Pentax	035
Perdio	002,101,103,173
Pershin	180
Philco	062,171,172,173,175,176,178,179
Philips	012,026,039,054,056,077,115,127,129,160, 172,174,180
Phonola	026,115,174,180
Pilot Sat	177
Pioneer	026,057,115,143,147,174,175
Plantron	179
Playsonic	171
P. Marconi	175
Portland	014,019,107,108,177
Prinz	002,101,148
PRO2	165,166,167,168,169,170
Profex	041,114,178
Prof-Ironic	115,145
Proline	002,052,101,133,134,136,173,174,178
Proscio	108,173,177
Prosonic	101,103,107,108,165
Protech	115
Provision	108
Pve	026,115,174,180
Qualcraft	173
Quartz	045,171
Quasar	177
Quelle	002,026,027,032,033,039,045,053,115,127, 135,156
Radialva	099,106,115,140,177
Radiola	026,115
Radionette	177
Rank	102
Rank Arena	175
RCA	094
Realistic	171,173,177
Recor	172
Rediffusion	179
REX	003,056,102,157,175
RFT	019,026,099,129,178
Roadstar	014,021,025,041,099,106,108,145,173,177, 178
Royal	099,114,178

Saba	003,046,056,066,067,081,102,108,131,132,133,134,151,157,175
Saisho	004,017,041,053,064,098,103,104,111,148,156,165,166,173
Salora	005,045,055,061,120,121,122,141,171,172
Sambers	173,177,180
Samsung	021,073,074,145,163,169,171,172,174
Samurai	019
Sansui	003,013,057,099,102,104,114,121,143,175,178
Sanwa	098
Sanyo	027,044,045,122,140,141,143,149,171,179
Savema	177
Saville	017,105,107,108,145,166
SBR	026,115
Scan Sonic	145
Schaub Lorenz	002,003,005,033,045,101,102,113,121,122,135
Schneider	002,004,014,019,025,026,034,041,099,101,106,108,115,145,165,172,173,174,177,178,179
Scott	171,177
Seaway	108
SEG	021,041,099,108,114,119,145,173,178
SEI sinudyne	026,098,115
Seleco	003,019,102,106,142,157,172,174,175
Semivox	103,138
Sentra	019,099,136,177,178
Sentron	041
Setron	099,178
Sharp	010,011,047,106,140,151,173,177
Shinko	173,178
Shintom	041,045,099,122,173,178
Shivaki	025,106,174,177
Shorai	098,148
Siarem	179
Siemens	025,032,039,045,050,106,115,122,127,128,150,155,160,171,180
Siera	115
Silma	174
Silva	025,106,177
Silver	108,171
Simko	173
Singer	171,172
Sinudyne	026,098,115,172,174
S. Lorenz	171,177,179
Solavox	019,179
Sonamec	173
Sonitron	149,177
Sonneclair	099
Sonoko	014,108,171,172
Sonolor	010,140
Sontec	025,106,172
Sony	018,020,024,070,071,072,075,078,112,121,124,130,161,164
Sound Master	172
Soundwave	103,106
Southern Cross	172
Special	177
Ssangyong	099
Standard	014,108
Starlite	106,122,177
Stern	108,175
Strong	013,173,178
STZ	173
Sunkai	004,103,104,108,165
Sunstar	002,101,173

Suntronic	002,101
Sunwood	041,099
Supertec	172
Supertech	173
Supra	106,145,172,173,177,178
Sylvania	173
Symphonic	173
Symphonic	099,101
Taisho	004,098,103,148,165
Tandberg	032,053,108
Tandy	177
Tashiko	002,010,101,106,115,140,145,174,173,178
Tatung	002,003,026,101,102,103,104,115,120,140,146,173,174,175
TCM	004,017,038,073,165,166,167,168,169,170,181
Teac	100,101,102,106,108,115,173,175
Teak	172,173,175
TEC	019,099,107,108,171,172,173,178
Techline	178
Technics	029,031,167
Technisat	103,104
Tedex	176,177
TEF	175
Teinel	172
Teknant	174
Teknika	173,177
Tele+	174
Teleavia	003,102,131,175
Telefunken	003,056,057,058,066,067,068,069,080,081,102,108,131,133,134,157,175
Telemeister	095
Telerent	173,175,177
Telestar	177,178
Teletech	099,101,108,114,178
Televideon	171,172,179
Tempest	019
Tenosal	041,099,178
Tensai	002,025,041,098,099,101,106,114,172,173,174,177,178
Tevion	004,017,038,073,103,104,165,166,167,168,169,170
T. Ferguson	175
Thomson	003,012,056,057,058,067,080,081,102,132,133,134,157,175
Thorn	003,045,064,102,106,122
Thorn F.	172,174,175,179,180
Tivo Hdd	012,078
TMK	087
Tokai	025,041,099,102,106,122,177,178
Tokiwa	099
Tonsai	041
Topline	104
Toshiba	003,026,034,056,061,102,115,120,129,138,157,170,172,175
Totevision	177
Towada	041,099,114,178
Towika	041
Trakton	019
Transonic	172,174
Triumph	053,156
TTR	175
TVA	019
Uher	025,033,106,135,145,175
Ultravox	033,107,108,135,171,172,179
Unic Radio	173,178
Unitech	021,145

United Quick Star	014,107,108
Universum	002,005,009,022,025,026,032,039,054,101,103,104,106,114,115,116,121,127,128,129,145,171,172,173,174,175,177,178,179,180
Univox	172
Uranya	171,172,177,179
Vector	062, 176
Vexa	172
Victor	057,058,142,143,175
Vidar	171
Video	062
Video E. Club	171
Videon	004,017,038,073,165,166,167,169
Video Tec.	173,178
Vidital	179
Vidion	171
Watson	105,115,172
Wattradio	179
Weltblich	177
Weltblick	025,106,172
White	085,086
White Westinghouse	033,085,086,135
W. Westingh.	171,177,179
Xenon	093
Yamaha	175,176
Yamishi	041,099,107,108
Yokan	041
Yoko	019,021,025,041,106,145,172,173,177,178
Zanela	171,173,178
ZX	103

SAT

Brand	SAT
AGS	249
Akai	003,125,242
Akena	249
Alba	003,004,005,006,007,008,009,102,133,328
Aldes	007,010,011
Allantide	015
Allsat	012,014,055,125,242,372
Allsonic	010,029,309
Alpha	242,249
Ampere	024
Amstrad	017,018,019,021,023,154
Andover cablevision	258
Ankaro	010,029,243,244,309
Anttron	004,009,014,247
Apollo	004
Arcon	017,024,025,027,056,243,325
Armstrong	021,242
Asat	125,242
AST	036
Astacom	249,250
Aston	164
Astra	003,021,030,031,032,033,034,093,284
Astro	009,011,029,040,041,042,241,247,309
Astrx	288
Atlanta	390,400
Athens	249
Audioton	009,055,247
Aura	034
Axiel	249
Axis	017,029,033,050,309
Barcom	025,243,325

Beko	381
Benjamin	342,343,344,345,346,347,348,349
Beon	375
Best	025,029,309,325
Blaupunkt	040,241
Boca	021,093,246
Boftec	350
Botech	351,352,353
Brain wave	044
Brandt	136,137,138,145,316
Broadcast	043
Brunor	126
BT	249,250
BT cable	260
BT satellite	003,022,145
Bush	005,006,012,045,102,133,328
Cabletime	261,262,263,264
Caliber	354,355,356,357,358,359
Cambridge	003,046
Camundosat	047
Canal+	140,174,222
Canal Satellite	245
Century	279
Channel master	007
Chaparral	098
Chess	318
Citycom	005,052,253
Clark	247
Clatronic	044
Clemens kamphus	015,083
Clyde cablevision	265
CNT	011
Colombia	249
Columbus	069
Commander	244
Commlink	010
Comtech	050,051
Condor	029,309
Connexions	039,047,048
Conrad	246,
Contec	050,052,246
Cosat	055
Crown	021
Cryptovision	266
Cybercom	306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Cybermaxx	306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Cytron	306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Daeryung	039
Dansat	012,014
DDC	007
Decca	053
Delega	007
DEW	050
Diamond	054
Dijiturk	360,361
Discovery	249
Diseqc	250
Disk Express	243
Diskxpress	025,048,325
Distrisat	242
Ditristrad	055

DNT	039,125,242
Dong Woo	092
Drake	056,128
Dual	306,307,308,309,311,312,313,316,317,318, 319,320,321
Dynasat	031
Echostar	026,039,057,058,060,073,149,150,151,156, 249,318,391
EEC	015
Einhell	004,010,015,019,021
Elekta	011
Elta	004,008,029,055,125,242,309
Elta Sat	372
Emanon	004
Emme Esse	029,031,045,083,309
Ep Sat	005
Eurodec	062,063,337
Eurograff	368
Europa	022,242,244,246
Eurosat	021,372
Eurosky	021,029,031,309
Eurospace	061
Eurostar	008,021,080
Exator	003,004,009,247
Exper	389
Fenner	249
Ferguson	005,012,014,045,062,064,065,066,337
Fidelity	017,019
Filmnet	267
Cablecrypt	
Filmnet	267
Comcrypt	
Finlandia	005
Finlux	003,005,030,067,072,079,335
Finnsat	050,062,337
FM	372
Fobem	384,386
Force	148
Fortec Star	285,286
Foxtel	324
Fracarro	133,249
France Satellite/Tv	069
Freecom	004,068
FTE	022,024,051,087,246
Fuba	004,025,029,032,039,040,069,072,122,125, 241,243,309,325
Galaxi	025,243
Galaxis	010,029,033,050,055,070,076,152,153,309, 317,372
Galaxy	325
Gardiner	253
GEC	265
Geima	344
GMI	021,390
Gold	386
Goldbox	245,322
Goldbox-D+	222,233
Golden Cable	400,403
Goldmaster	362,363
Goldstar	068
Gooding	075
Goodmans	005,074,328
Granada	030
Grothusen	004,068
Grundig	005,009,040,045,075,077,086,124,154,235, 241,251,252,324
G-Sat	014,015

Hanseatic	095,312
Hantor	004,019,044,092
Hanuri	011
Harting Und Helling	015
HEDY	277
Heliocom	024
High Performance	082
Hinari	007,008,014
Hirschmann	015,039,040,078,079,080,083,122,129,178, 179,180,181,241,250,335
Hisawa	044
Hitachi	005,045,115
Houston	055,244,249
Humax	152,192,193,234,281
Huth	010,013,021,043,044,050,055,083,244,246
Hyundai	326
ICX	364
Imperial	102,133
Innovation	029,085,095,153,156,157,309,311,312,313, 317,318,319,320,321
Intersat	377
Intertronic	021
Intervision	055
Italtel-Stream	223,224
ITT/Nokia	005,030,045,048,079,115,122,335
Jeemon	372
Jerrold	257,270,364
Johansson	044
Jok	250
Jsr	055,372
JVC	003,075,236
Kathrein	015,040,042,052,087,088,089,090,098,125, 177,241,242,247,249,253,254,399
Kosmos	068,083,087,088,399
KR	009,247
Kreiselmeyer	040,241
Kyostar	004,247
Kyoto	353
Labgear	327
Lasat	011,029,091,092,093,136,137,138,309,316
Lenco	004,022,068,094,244
Leng	044
Lennox	055
Lenson	336
Lexus	242
Leyco	003
LG	068
Lidcom	328
Life	137,153,317
Lifesat	029,085,095,137,153,156,157,306,307,308, 309,310,311,312,313,314,315,316,317,318, 319,320,321
Lifetec	029,085,095,137,153,156,157,306,307,308, 309,310,311,312,313,314,315,316,317,318, 319,320,321
Lion	015,061
Lorenzen	244
Lorenzen Inc.	401,355
Lorraine	068
Lupus	029,309
Luxor	019,030,115,122
Lyonnaise	337
Macab	062,337
Manata	249,250
Manhattan	005,011,045,055,249,250,372
Marantz	125,242

Mascom	011,088
Maspro	005,045,064,075,098,129,235,241,251
Matav	399,400,403
Matsui	003,075,145,235,241,250
Mb	095,312
Medibox	245
Mediamarkt	021
Mediasat	033,245
Medion	029,085,095,137,153,156,157,214,215,216, 217,218,219,306,307,308,309,310,311,312, 313,314,315,316,317,318,319,320,321
Mega	125,242
Melectronic	253
Metronic	004,009,010,171,247,253,325
Metz	040,241
Micro	247
Micromaxx	029,085,095,137,153,156,157,306,307,308, 309,310,311,312,313,314,315,316,317,318, 319,320,321
Microstar	029,085,095,137,153,156,157,306,307,308, 309,310,311,312,313,314,315,316,317,318, 319,320,321
Micro Technology	015,034,061
Mimtech	096
Minerva	040,075,235
Mitsubishi	005,040,145
Mitsumi	093
Morgans	021,093,097,125,242,246
Morgan sydney	338
Movie Time	269
Multichoice	172,324
Multistar	087,092,399
Multitec	318,319
Muratto	038,068
Navex	044
NEC	100,101
Network	014
Neuhaus	033,055,071,244,246,336
Newyork	389
Next	364,365,366,367,368,369,370,371
Nextwave	016,155,364
Nikko	021
Nimbus	096
Nokia	005,030,045,048,079,110,111,122,134,135, 194,195,196,197,198,199,200,201,202,203, 204,222,223,227,230,236,280,292,335
Nomex	339
Nordmende	004,005,007,011,062,065,123,337
Nova(Yenicag)	395,397,398
Novis	044
OAK	271
Oceanic	015,054,061
Octagon	004,008,009,050,244,247
Okano	021,083,087,236,237,238,239,399
Ondigital	186,229,230
Optex	052,055,372
Orbit	015,036
Orbitech	004,103,246
Origo	105
Osat	009
Otto Versand	040
Oxford	003,249
Pace	005,012,014,040,045,064,074,099,107,112, 130,154,186,189,191,195,204,205,206,207, 208,209,210,211,212,213,361
Pacific	054

Packsat	250
Palcom	007,032,069,071,336
Palladium	021,075,077,235
Paltec	032
Panasonic	005,045,154,183
Panda	005,012,241
Pansat	329
Patriot	249,
Patriot Worldsat	003,249,250
Philips	005,014,028,035,037,045,049,059,075,086, 099,104,121,124,125,132,169,170,222,224, 225,235,237,238,241,242,243,244,245,246, 247,248,249,250,251,252,253,254,311
Phoenix	014,050,074
Phonotrend	010,055,083
Pilot Sat	372,373,374
Pioneer	245,272,273,275
Pk Sat	015
Planet	380
Polsat	173,337
Polytron	052
Predki	044
Preisner	246
Premiere	055,140,245
Priesner	021
PRO2	306,307,308,309,310,311,312,313,314,315, 316,317,318,319,320,321
Profi	094
Profile	249
Promax	005
Prosat	006,007,010,102,133
Protek	015,054
Proton	015
Provision	011
Ptt Telecom	047
Pye	235,
Quadral	007,010,029,246,249,250,309
Quelle	019,040
Quiero	173,337
Radiola	125,242
Radix	039
Rainbow	009,247
RC	364
RE	096
Rebox	330
Rediffusion	101
Redpoint	033
Redstar	029,309
Regal	350
Remoshack	296
Revox	096
RFT	010,103,125,242,244
Roadmaster	355,375,376,377,378
Ruefach	094
Saba	006,011,014,045,061,064,065,120,127,133, 136,142,143,144,146,250
Sabre	005
Sagem	062,337
Sakura	050,074
Salora	030,100,101,107,274
Samsung	004,027,078,272,399
Sat	007,017,036,038
Satbox	276
Satcom	043,095,106,312
Satec	014,045
Sateco	372
Satellite	390

Satford	043
Satmaster	043
Satpartner	004,009,011,044,068,083,247
Schäcke	247
Schneider	049,248,250,252,254,309,313,317,318,319,320
Schwaiger	013,014,052,054,089,095,137,144,146,147,152,155,157,168,246,306,312,316,317,319
Scientific Atlanta Sts	255,256,268
Seemann	003,021,033,039
SEG	004,008,029,034,044,095,119,309,312
Seleco	055
Siemens	040,241
Silva	068
Skardin	033
Sky	154,182,190,191,220,221,278,282,283,323
Sky Digital	154
Skymaster	010,095,148,156,158,159,160,161,162,293,294,295,297,298,299,300,301,302,303,304,305,312,315,318,319
Skymax	015,125,242
Skyvision	055
Sony	020,154
SR	021,065,093
Starion	034
Starland	156,318
Starring	044
Star Trak	004
Stella	047
Strong	004,009,029,048,051,081,133,222,228,247,289,309,400
Sumida	021
Sun/Moon/Star	184
Sunny	355,376,379,380,381,382
Sunstar	021,093,107
Tandberg	062,337
Tandy	009
Tantec	005,045,064,069,071,336
Tatung	053,105
TCM	029,085,095,137,153,156,157,306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Techniland	043
Technisat	039,071,103,108,109,126,242,336,372
Teco	021,093
Telanor	007
Telasat	095,312
Tele+1	222,228,267
Teleciel	247
Telecom	047,372
Telefunken	004,045,131,136,137,138,145,250,316
Teleka	009,021,027,039,088,247,251
Telemaster	011
Telemax	091
Telesat	095,312
Telestar	071,336
Televes	005,185,187,188,338,340
Telewire	055
Telkom	350,383
Tempo	375,384,385,386,387
Termal	350,375,388,389,390,391,392
Tevion	029,085,095,137,153,156,157,218,219,306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Thomson	005,065,084,131,139,145,173,245,249,250,337
Thorens	054

Thorn	005,012,014,045,064,066
Tioko	052
Tochibo	368
Tofild	350
Tokai	242,388
Tonna	005,043,055,249
Topfield	331,332,333
Toshiba	239
TPS	141,175
Triad	015,036,038,068,113
Triasat	072
Triax	040,071,136,242,336
Tristar	051
Tudi	259
Twiner	338,340
Ultravox	372
Uniden	114,287
Unisat	021,050,242
Unitor	025,044,243
Universum	040,067,075,079,235,241,335
Variosat	241
Variostat	040
Vector	015,061
Ventana	125,242
Vestel	350,383,393,394
Via Digital	135,139,231,232
Visiopass	335
Visiosat	044,055,156,163,164,165,166,167,318
Viva	244
Vivanco	334,341
Vortec	004,027,078
VTech	253
V-Tech	036,038,104,115
Way	291
Wela	246
Westminster Cable	260
Wevasat	005,015
Wewa	005
Winer	290
Winersat	044
Wisi	005,036,038,039,040,113,116,117,118,241, 246
Wittenberg	017
Wolsey	082
Woorisat	011
Xsat	176,249
Yenicag	395,396,397,398
Yonsat	380
Yumatu	355,389,399,400,401,402,403
Zehnder	011,029,038,087,089,119,243,253,309,325, 399
Zeta Technology	242
Zirwatel	351
Zodiac	009,247

CD

Brand	CD
Adcom	006
Aiwa	007,008,009,098
Akai	010,011,012,013
Alba	014
Arcam	083
Asuka	015
Audiosonic	015
Bestar	016

BSR	017
Bush	018
California audio lab	019
Carrera	020
Classic	119
Condor	017
Crown	021
Cybercom	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Cybermaxx	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Cytron	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Denon	022,023
Dual	015,024,103,104,105,107,108,109,110,111,112,113,114,115,116,117,118
Elta	105,108,113
Emerson	006,016,025
Fisher	026,027
Genexxa	016,025,028,029,030,031,032,033,034,107
Goldstar	020
Goodmans	025,035,036
Grundig	037,083
Harmon Kardon	010,038,039,040
Hitachi	006,024,041,042,043
Innovation	081,089,090,091,092,093,094,109,110,111,112,113,114,115
Intersound	015
JVC	044
Kenwood	026,029,045,046,047,100
Kodak	005
LG	020
Lifetec	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Linn	083
Luxman	048,049
Magnum	081,089,090,091,092,093,094,109,110,111,112,113,114,115
Marantz	051,052,083
Matsui	051,053,083
Mcintosh	054,055
Medion	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
M-Electronic	050
Memorex	006,016,025,031,034
Meridian	083
Micromaxx	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Micromega	083
Microstar	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Mission	083
NAD	028,049,084,085,086,087
Naim	083
Nakamichi	056,057
Onkyo	002,058,059,060,061
Panasonic	018,019,062
Philips	003,063,064,082,083
Philips Cd-I	064
Philips Cd-V	002
Pioneer	030,034,099
PRO2	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120

Proton	083
Quad	083
Realistic	006,016,031,032,107
Roadstar	050,063,065
Rotel	083
Saba	024
SAE	083
Samsung	102
Sansui	003,025,066,067,068,083
Schneider	001,017,083
Scott	016,025
Sharp	029,069,070,071
Sherwood	124
Siemens	072
Signature	010
Singer	118
Skymaster	121
Sony	028,073,074,075,088,095,096,097
Sunwood	015
Tandberg	083
TCM	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Teac	122
Technics	019,062,077,101
Telefunken	024
Tevion	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
TheorieSanwendung	123
Thomson	004,024
Toshiba	049,078,079
Universum	083
Vector Research	020
Victor	044
Welltech	107,108,112
Yamaha	069,076,080
Yorx	065

DVD

Brand	DVD	DV R
Accoustic solutions	128	
Aiwa	129	
Akai	010,034,064	
Alba	130,131,132	
Ames	128	
Amstrad	130	
AMW	091	
Apex	132,133,134,135	
Arena	120	120
A-trend	136	
BBK	075,076,077,078,079,080,081,082,083,084,085,170,191,192	
Brandt	118	
Broksonic	137	
Bush	097,130,131,132,147	
Black diamond	130	
Centrum	138,139,140,141	
Cinevision	142	
Classic	128	
CMI	120	120
Crown	118	

Cybercom	102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
CyberHome	042,068,136	
Cybermaxx	102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Cytron	102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Daewoo	070,091,171(DVD),172(DVD),173(DVD)	
Daytron	143	
Denon	005,036,058	
Denver	131	
DIK	114	
Dmtech	144	
Dual	102,103,104,105,107,108,109,110,111,112,113,114,115,116,117,118,119,120,128,130,167	120
DVD 1024	145	
ECCG	095	
Elta	146,147,168	
Emerson	142	
Ferguson	118	
Finlux	142	
Fisher	148	
GE	132	
Golden Sphere	108	
Goodmans	118,147	
Goldstar	142	
Go-Video	105	
Gradiente	118	
Grundig	011,158,169	
GVG	096	
Haaz	108,109	
Harman/Kardon	050,150	
H&B	110	
Himage	094	
Hitachi	009,025,030,043,063,127,163	127
HTY	086	
Initial	132	
Innovation	012,013,014,114,116,117,118	
JBL	150	
JVC	002,032,066	
Kawai	174(DVD)	
Kendo	114,120	120
Kenwood	005,028,058	
KLH	132	
Konka	175(DVD),176(DVD),177(DVD),178(DVD),	
Koss	118	
Labwave	023,048	
Lasonic	067,108	
Lecson	151	
Lenoxx	152	
LG	016,142,153	
Life	012,013,014,116,117,118	
Lifetec	012,013,014,102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Limit	108	
Linn	035	
Loewe	011,039,158	
Magnavox	056,089,125,126,157	
Magnum	181,182,185,186	

Marantz	003,038,142,157,158,159	
Matsui	118	
Maxim	091	
MBO	154	
Medion	012,013,014,041,102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Metz	009,024,163	
Mico	087,088	
Micromaxx	012,013,014,102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Microsoft	155	
Microstar	012,013,014,102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Mintek	132	
Mitsubishi	007,130	
Mustek	069,071,072,128	
NAD	027,142,162	
Nakamichi	156	
Noname	045	
Norcent	093	
Nortek	091	
Onkyo	015,029,065,149	
Optimus	059	
Orion	137	
Oritron	118	
Pacific	114	
Panasonic	005,006,017,022,036,051,054,055,058	
Panda	090	
Philco	053	
Philips	003,011,039,040,047,052,125,126,157,158,159	125,126
Philips magnavox	157,158,159	
Pioneer	009,024,026,059,062,163	
Prism	104	
PRO2	102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Proline	118	
Proscan	155	
Prosonic	160,161	
RCA	057,073,132,155	
Regal	179(DVD)	
Reoc	108	
REX	138	
RTL	120	120
Saba	118	
Salora	142	
Sampo	108	
Samsung	008,030,063,105	
Sanyo	092,148	
Schneider	014,113,114,118,130,144,161	
SEG	108,130	
Sharp	012,013,116,162	
Sherwood	044	
Shinco	132	
Shinonic	132	
Siltex	076	
Skymaster	098,099,100,101,128,147	
Sm electronic	128,147	
Sony	004,031,046,060	
Strong	091	
SVA	074	
Sunsui	137	

Supervision	147	
Sylvania	106	
TCM	012,013,014,102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124,180,184	120
Teac	108,132,163	
Technics	005,036,037,058,155	
Tevion	012,013,014,102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124,183,187,188,189,190	120
Techwood	162	
Theta digital	163	
Thomson	001,033,155	
Toshiba	003,049,137,157	
United	164,165	
Universum	130	
Vestel	179(DVD)	
Wharfedale	151	
Xenius	115,118	
Yamaha	005,036,058,061,125,126	125,126
Yamakawa	166	
Zenith	142	
Others	018,019,020,021	

TAPE

Brand	TAPE
Aiwa	008,009,010,126,127
Akai	015,079,089,099,100,110
Amstrad	082
Aswo	017
Braun	036
Bush	003
Daewoo	073
Denon	002,006,007,045,058,132
Diora	065,066
Dual	016,101,102
Fischer	059,060,071,129
Goldstar	128
Goodmanns	001
Goodmans	033
Grundig	017,021,026,134
Harman Kardon	057,092
Hitachi	045,081
ITT	084,085
JVC	011,028,029,123,124
Kenwood	014,083,098,101,102,116,121,122
Linn	054
Luxman	042,043,050,097
Magnavox	134
Marantz	017,053,088,134
NAD	069,070
Nakamichi	093
Nokia	086
Okano	113,114
Onkyo	012,013,022,067,068
Palladium	109
Panasonic	048,094,095
Philips	017,026,087,134
Pioneer	019,020,078,104,106,107,108
Radmor	053
Revox	027
Revox/Studer	017

Samsung	049,051,052,062,063
Sansui	134
Sany	071
Sanyo	072,096,103
Schneider	017,032,033,034,035,038,039,040,044,084,085,112,128
Sharp	005,030,116
Sherwood	056,074,075,076,077
Siemens	015,017,046,047,111,112,115,117,118,119,120,128
Sony	031,091,105,130,131,133
T+A	037,125
T+A Elektroakustik	125
Technics	004,055,064,094
Thomson	018
Universum	034,041,052,061,112,115
Yamaha	023,024,025,080,090

TUNER

Brand	TUNER
Aiwa	006,007,048
Akai	026,077,089
Amstrad	081,093,097,098
Ash	053
Aswo	056
Bush	042
Centrum	104
Cybercom	105,106,107
Cybermaxx	105,106,107
Cytron	105,106,107
Daewoo	087
Denon	001,002,031,052,074,100
Diora	090
Dual	011,025,105,106
Elta	108,109
Fischer	063
Goldstar	004
Goodmanns	077
Goodmans	042
Grundig	056,058,110
Harman Kardon	084
Hitachi	031,082
ITT	030
JVC	044,073,076
Kenwood	025,066,068,071,075
Lifetec	105,106,107
Linn	101
Luxman	067,103
Marantz	056,110
Medion	105,106,107
Microstar	105,106,107
Micromaxx	105,106,107
Minowa	039
Mission	018
NAD	088
Nakamichi	049
Nokia	040
Noname	042
Okano	079,092
Onkvo	055,069
Palladium	080
Panasonic	001,061
Philips	056,110

Pioneer	010,013,014,065
PRO2	105,106,107
Radmor	057
Revox	016
Revox/Studer	056
Rotel	008
Sansui	110
Samsung	009,041,078,094,102
Sanyo	022,062
Schneider	004,018,020,021,023,024,028,029,030,032, 033,034,037,038,039,042,070,072,080,089, 092,093,098
Sharp	003,075
Sherwood	043,085,086
Siemens	004,018,036,037,047,056,077,087,092,095, 099
Sinotec	024
Sinotec(Pepsi- Dose)	024
Sony	019,046,050,051
Supertech	042
T+A	035,054
T+A Elektroakustik	054
TCM	105,106,107,111
Teac	112,113
Technics	017,059,060,091
Tevion	105,106,107
Theorie&anwe ndung	114
Thomson	012
Uher	005
Universum	033,077,092,096,102
Yamaha	015,027,045,064,083

AUX (OTHER)

Brand	AMP	LD/OTHER
ADT		161
Aiwa	028,128,129	181,182
Akai	018,112,121	
Amplifier	158	
Amstrad	014,034,077,086,145	
Arion		162
ASH	027	
Aswo	043	
Audio Comb1		040,190
Braun	104	
Bush	032,116	
CD Photo		039
CDR		041,191
CD Video		038
Cpremier		195(VCD)
Cybercom	169,170,171	173,174,175,176,1 77,178
Cybermaxx	169,170,171	173,174,175,176,1 77,178
Cytron	169,170,171	173,174,175,176,1 77,178
Daewoo	022	194
DBS		179
Denon	020,080,098,131,139	001(LD)
Diora	081	
Disco Vision		003(LD)
DMT		161
Dual	062,124,169,170	173,174,175,176,1 83

Elta		176,184
Fischer	021,085,134	
Fujitec		195(VCD),196(VCD)
Goldstar	029	
Gold Vision		166,167
Goodmanns	015,018,032	
Grundig	043,142,148	005(LD),043,044,046
Harman Kardon	091	
HDT		159
Hitachi	098	003(LD)
Home automation		192
ITT	073	
JBL	068,118	
JVC	067,146,150	
Kawai		195(VCD),196(VCD),197(VCD),198(VCD),199,200(VCD)
Kenwood	023,062,156	062
Lifetec	169,170,171	173,174,175,176,177,178
Linn	043,148	043
Luxman	099,100,149,152	
Magnavox		046
Magnum		201
Marantz	043,148,153	043,044,046
Medion	034,169,170,171	173,174,175,176,177,178
Meridian	148	043
Micromaxx	169,170,171	173,174,175,176,177,178
Microstar	169,170,171	173,174,175,176,177,178
Minowa	013	
Mission	155	
Mitsubishi		005(LD)
NAD	048	005(LD),047,048,049,050
Naim		043
Nakamichi	069	
Niam	148	
Nokia	072	
Noname	032	
Okano	016,017	
Onkyo	024,125	
Palladium	033,090,133	
Palladium/Okano	143	
Panasonic	136,138,141	
Philips	043,101,140,148,153,154	004(LD),006(LD),043,044,045,046
Pioneer	011,119,148	003(LD),005(LD),043,055,185
Premier		195(VCD),196(VCD)
PRO2	169,170,171	173,174,175,176,177,178
Quad	148	043
Radiola		006(LD)
Radiotone	087	
Radix		160
Radmor	140,153,154	
Revox	089,120	
Revox/Studer	101,153,154	
Rotel	126,127	

Saba	151	
Samsung	010,074,083,092	065,186
Sansui		044,046
Sanyo	134,157	
Schneider	012,013,016,019,026, 029,032,033,034,035, 043,073,075,086,088, 096,105,106,107,108, 109,110,111,113,114, 115,143,144,145,147	
Sharp	132,156	187
Sherwood	071,078,079	
Show		196(VCD)
Siemens	016,018,019,022,026, 029,031,034,043,075, 093,094,095,142	
Sinotec	035	
Sinotec(Pepsi-Dose)	035	
Sony	036,117,133	002(LD),007(LD), 008(LD),051,052, 053,056,057,058,0 59,060,061,168,18 8
Sunny		196(VCD)
Supertech	032	
Switch Box		180
T+A	025,103	
T+A Elektroakustik	025	
TCM	169,170,171,172	173,174,175,176,1 77,178,202,203
Techmate		163
Technics	082,097,135,138	063
Techsan		164,165
Telefunken		005(LD)
Tensai	102	
Tevion	169,170,171	173,174,175,176,1 77,178,204
Thomson	123	064
Thorn		009(LD)
Uher	130	
Universum	010,016,018,084,107	
Video CD		037,189
Welltech		173,178
X-10(NEC)		193
Yamaha	030,070,076,122	042,054,066
Others	137	